



# • SYSTEM-10 • INSTALLATION LAYOUT FOR STRATIFIED THERMAL STORAGE SYSTEM

## System In "Charge" Mode (Charging tank with CHW)

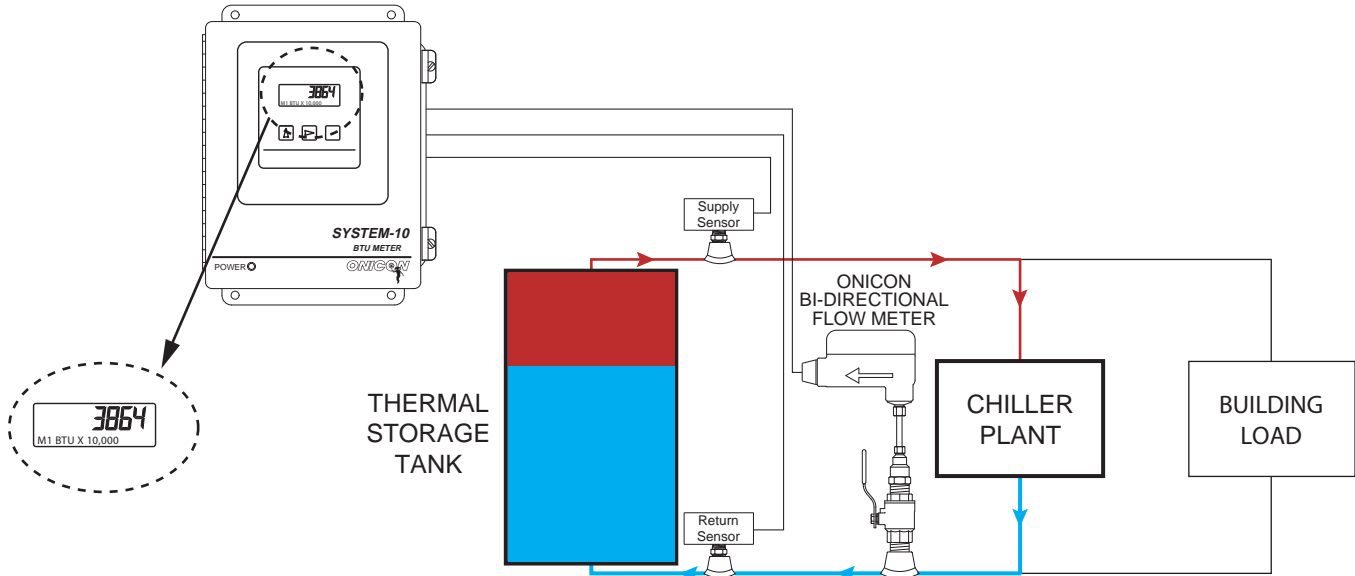

## System In "Discharge" Mode (Using CHW from tank to cool building)

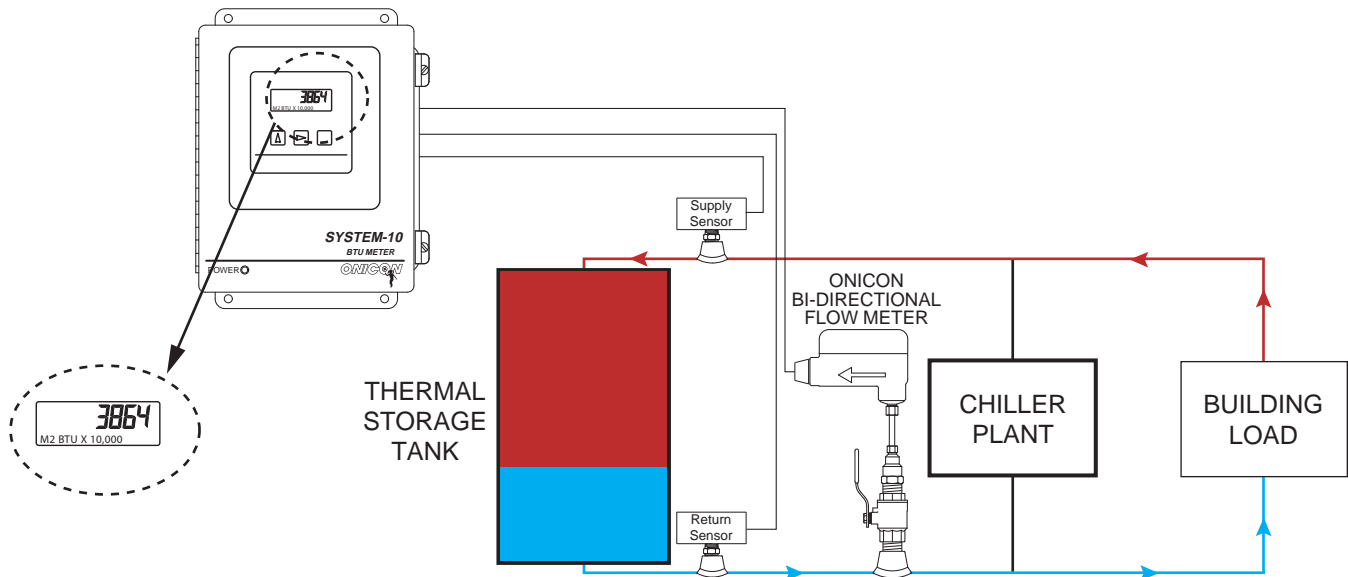

1. Install temperature sensors as shown.
2. Bi-directional flow meter can be installed supply or return; choose location based on maximum straight pipe run.
3. For proper mode indication, arrow on flow meter must point in the direction of flow with system in "charge mode".