



SYSTEM-10 INSTALLATION LAYOUT FOR STRATIFIED THERMAL STORAGE SYSTEM

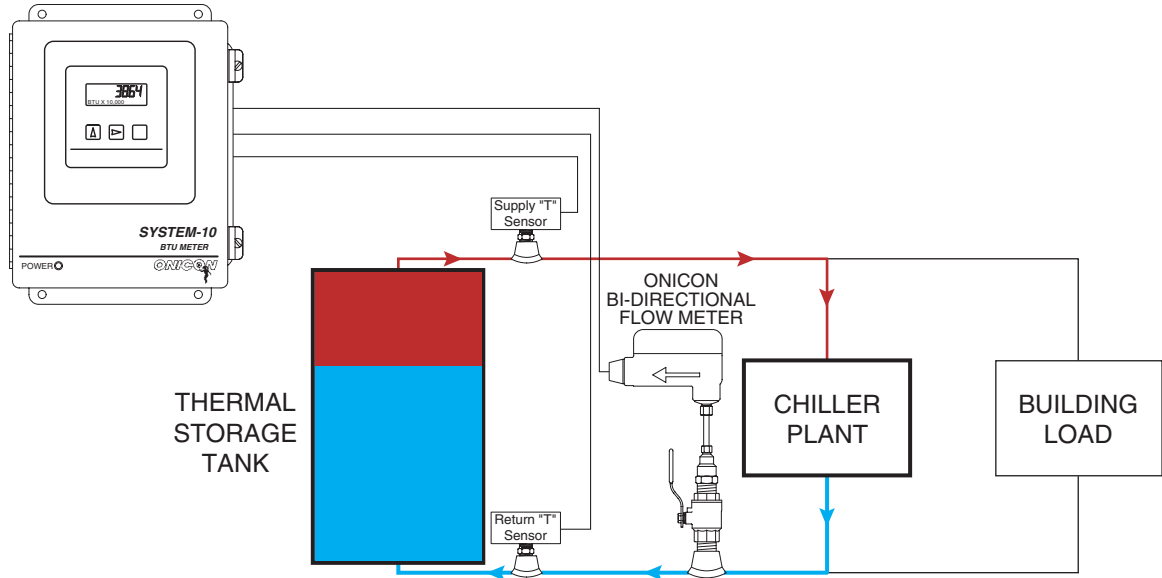

System In "Charge" Mode (Charging tank with CHW)



System In "Discharge" Mode (Using CHW from tank to cool building)

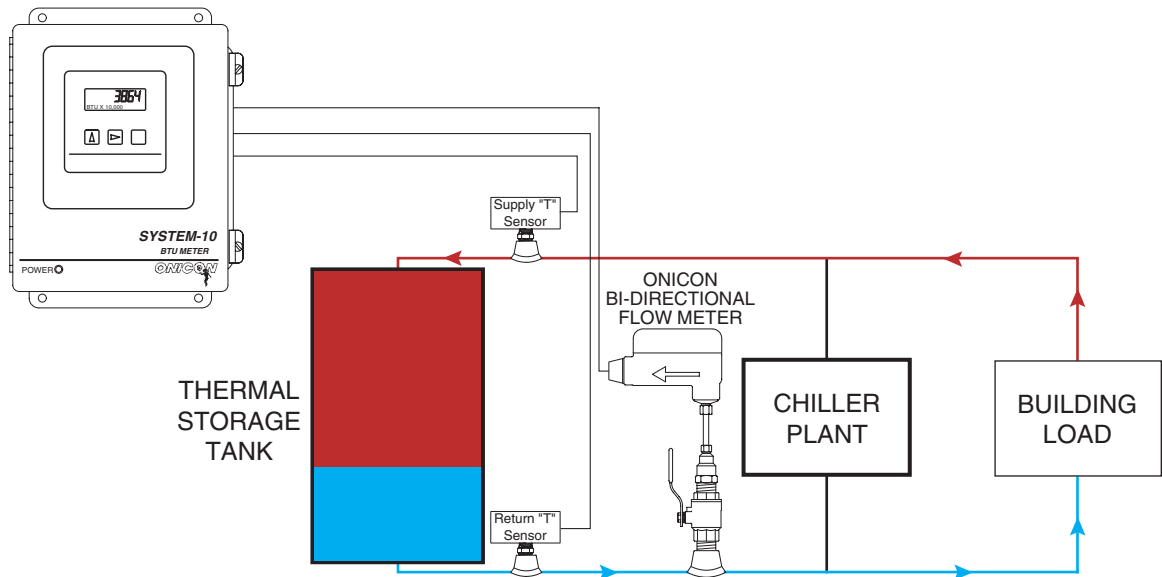

1. Install temperature sensors as shown.
2. Bi-directional flow meter can be installed supply or return; choose location based on maximum straight pipe run.
3. For proper mode indication, arrow on flow meter must point in the direction of flow with system in "charge mode".