


## FT-3400 Quick Start Guide


+1 (727) 447-6140 www.onicon.com

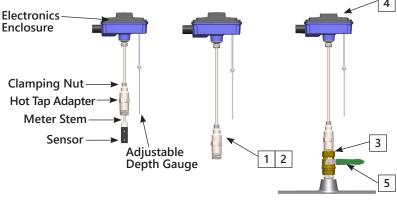



- Install in vertical or horizontal pipe

  The horizontal pipe position mater
- For horizontal pipe position meter anywhere in upper 240°

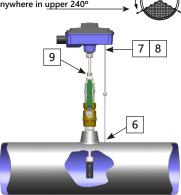

Grounding rings placed before and after the meter are required for installation on non-metallic or lined pipes.

- Keep the sensor fully withdrawn during installation.
- 2. Apply paste or Teflon tape as necessary.
- Thread the hot tap adapter on to ball valve and tighten it as necessary. DO NOT OVERTIGHTEN.
- Maintain a firm grip on the enclosure to counteract the effects of the pressure in the pipe.
- 5. Slowly open the valve to the fully open position.
- 6. Slowly push down on the flow meter, piercing any insulation, to ensure the tip of the gauge is in contact with the pipe.
- 7. Confirm the bottom of the enclosure is in contact with the top of the depth gauge to ensure correct sensor depth.
- 8. Position the enclosure parallel with the pipe and ensure flow direction arrow matches direction of flow in the pipe.
- 9. Carefully tighten the clamping nut. DO NOT OVERTIGHTEN.

NOTE: Gauge length is based on the flow meter model and pipe size. To install the flow meter in a different pipe size than factory configured for, refer to the meter manual in the OR code.

DOC-0005467 Rev.D

	Wire Color	Description	Notes
	Red	(+) 24V Supply voltage	20 - 28 VAC 60 Hz 10 VA OB 20 - 28 VDC
POWER / GROUND	Black	(-) Isolated supply voltage common	400 mA at 24 VDC
	Green / Yellow	Earth ground connection	Required for meter operation
	Green	(+) Isolated frequency output	
OUT	Yellow	(-) Frequency output common	or BTU meter
	Blue	(+) Isolated 4-20mA analog output	2mA = Master Alarm
ANALOG OUT	White	(+) Isolated 2-10V or 1-5V analog output	Configurable via PC app 1V = Master Alarm for 2-10V or 0.5V = Master Alarm for 1-5V
	Brown	(-) Isolated analog output common	
	Orange / Black	Dry Contact 1	Pulse scaled output for totalization. Example:
	White / Black	DIY COILIACE I	1 pulse per 10 gal / 1 pulse per 100 gal
DRY CONTACT	Gray / Black	Dry Contact 2	Master Alarm Contact
or Alarm)	Violet / Black	Dif colliact z	Master Marin Contact
	Gray	Dry Contact 3	Bidirectional Contact
	Violet	DIY COIII. act 3	(only available on the FT-3400-2)

DO NOT REMOVE TAG



