
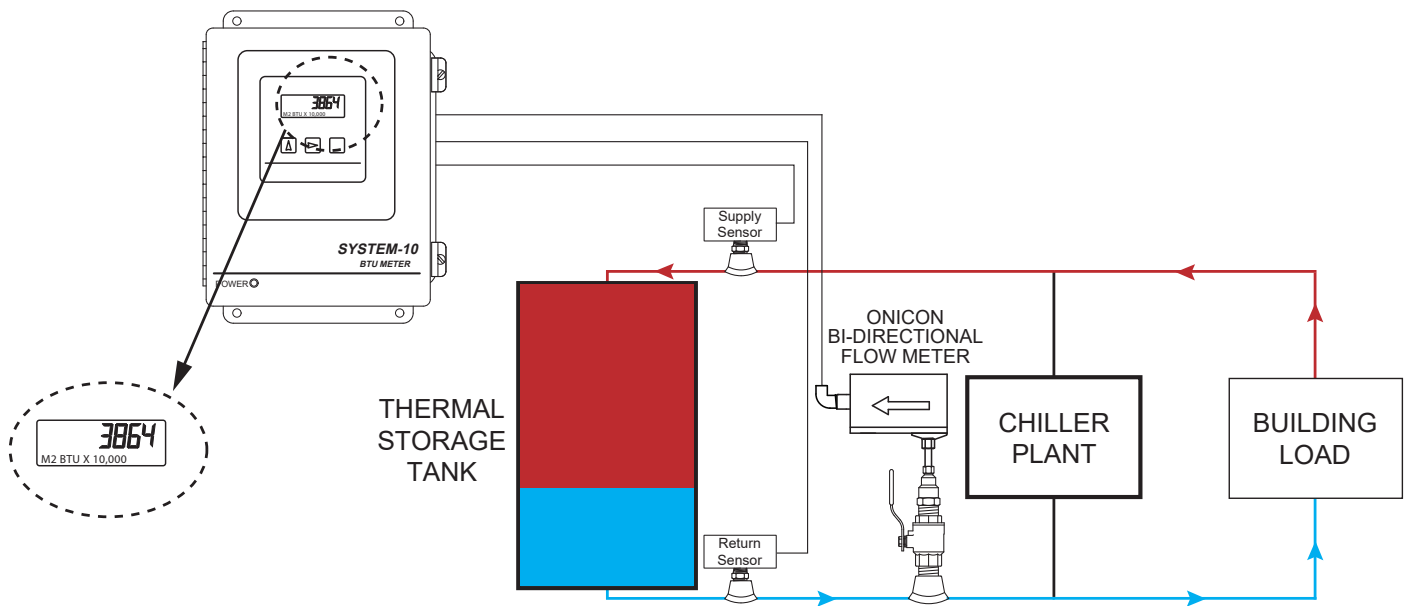


System-10 Installation Layout for Ice Storage System

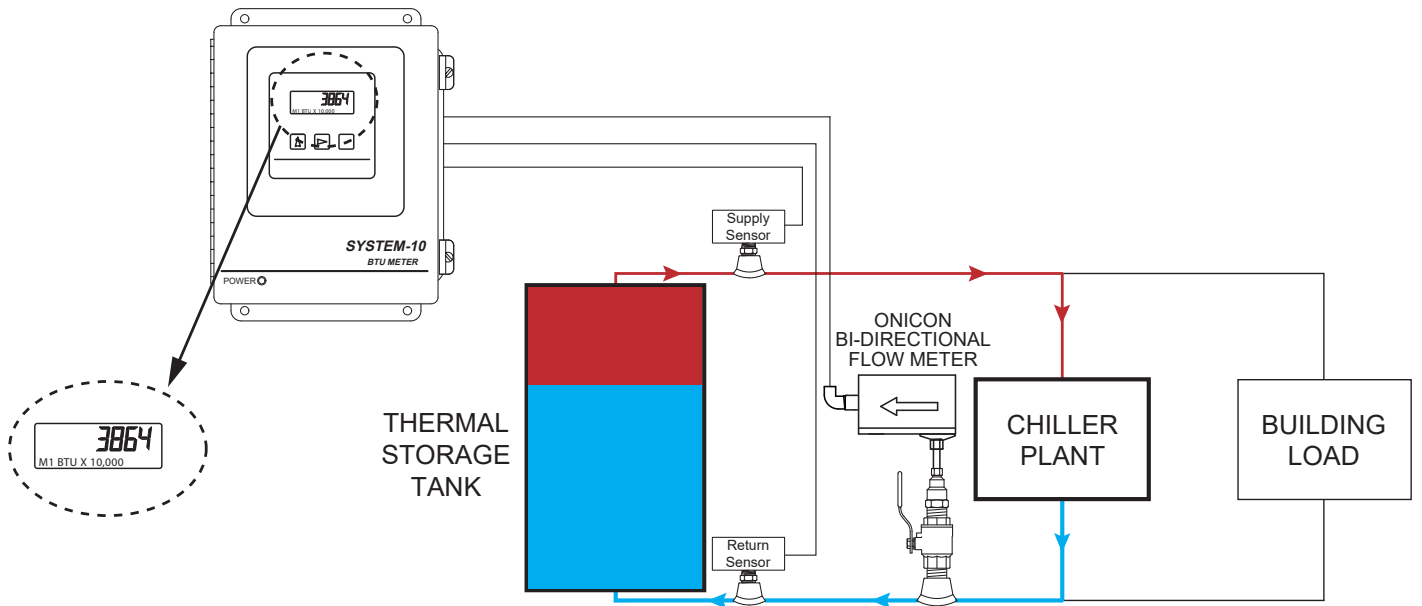

1. Install temperature sensors as shown for proper mode indication.
2. Flow meter can be installed in supply or return; choose location based on maximum straight pipe run.