

# TECH NOTES

## F-1500 Insertion Turbine Flow Meter



### TRANSMITTER ORIENTATION ADJUSTMENT

#### OVERVIEW

The display can be rotated up to 180° for optimal viewing of the screen. Use the diagram below for reference in performing the process.

#### REQUIRED TOOLS

- Adjustable Crescent Wrench
- Heat Gun

#### PROCEDURE

1. Remove the windowed cover to check that the sensor wires are not pulled too tight when rotating the housing.
2. Heat the lock nut.
3. Put an adjustable crescent wrench on the conduit adapter to prevent it from turning.
4. Use an adjustable crescent wrench to loosen the locknut.
5. Rotate the electronic housing clockwise or counterclockwise, no more than 180 degrees.
6. Tighten the lock nut.



#### F-1500 DIAGRAM

