

SYSTEM-30 BTU MEASUREMENT SYSTEM
BACnet MS/TP Version
Installation and Operation Guide



For Software Version FB5.20 or higher.

Safety Information

This meter was calibrated at the factory before shipment.

To ensure correct use of the meter, please read this manual thoroughly.

Regarding This Manual:

- This manual should be passed on to the end user.
- Before use, read this manual thoroughly to comprehend its contents.
- The contents of this manual may be changed without prior notice.
- All rights reserved. No part of this manual may be reproduced in any form without ONICON's written permission.
- ONICON makes no warranty of any kind with regard to this material, including, but not limited to, implied warranties of merchantability and suitability for a particular purpose.
- All reasonable effort has been made to ensure the accuracy of the contents of this manual. However, if any errors are found, please inform ONICON.
- ONICON assumes no responsibilities for this product except as stated in the warranty.
- If the customer or any third party is harmed by the use of this product, ONICON assumes no responsibility for any such harm owing to any defects in the product which were not predictable, or for any indirect damages.

Safety Precautions:

The following general safety precautions must be observed during all phases of installation, operation, service, and repair of this product. Failure to comply with these precautions or with specific WARNINGS given elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. ONICON Incorporated assumes no liability for the customer's failure to comply with these requirements. If this product is used in a manner not specified in this manual, the protection provided by this product may be impaired.

The following symbols are used in this manual:



WARNING

Messages identified as "Warning" contain information regarding the personal safety of individuals involved in the installation, operation or service of this product.



CAUTION

Messages identified as "Caution" contain information regarding potential damage to the product or other ancillary products.



IMPORTANT NOTE

Messages identified as "Important Note" contain information critical to the proper operation of the product.

TABLE OF CONTENTS

1.0	INTRODUCTION	5
1.1	Purpose of this Guide.....	5
1.2	Typical SYSTEM-30 BTU MEASUREMENT SYSTEM	5
1.3	Standard Features and Specifications	6
1.4	Working Environment	7
1.5	Warranty and Serial Number	7
2.0	UNPACKING.....	8
2.1	Checking That You Have Received Everything	8
3.0	INSTALLATION	9
3.1	Site Selection	9
3.2	Mechanical Installation	10
3.2.1	Main Unit Installation.....	10
3.2.2	Thermowell Installation	11
3.2.3	Temperature Sensor Installation	11
3.3	Electrical Installation	13
3.3.1	Single Mode vs. Dual Mode Operation	13
3.3.2	Electrical Wiring	16
4.0	START UP & COMMISSIONING	17
4.1	Display and User Interface.....	17
4.2	Processor Start Up	17
4.3	Units and Multipliers.....	18
4.4	Network Device Address Entry	19
4.4.1	Changing the MAC Address.....	19
4.4.2	Changing the Device Instance Number	19
4.5	BAUD Rate.....	26
4.6	BACnet Objects	27
4.7	Diagnostics	28
4.7.1	Diagnostic Lights	28
4.8	Commissioning.....	29
4.8.1	Commissioning Worksheet	30

APPENDIX A – DRAWINGS

A-1 TYPICAL SYSTEM INSTALLATION

A-2 / A-3 THERMOWELL INSTALLATION

A-4 WIRING DIAGRAM

A-5 SIGNAL CONNECTION BOARD

A-6 WIRING DIAGRAM FOR DIN CONNECTOR

A-7 BACnet BOARD

SECTION 1.0: INTRODUCTION



WARNING


Only qualified service personnel should attempt to install or service this equipment. Serious injury may result from the improper installation or use of this equipment.

1.1 PURPOSE OF THIS GUIDE

The purpose of this guide is to provide installation and commissioning procedures and basic operating and servicing instructions for the ONICON SYSTEM-30 BTU MEASUREMENT SYSTEM.

1.2 TYPICAL SYSTEM-30 BTU MEASUREMENT SYSTEM

ONICON'S System-30 is a true heat (Btu) computer, which accepts data from several sensors, performs a series of computations with that data, and transmits the results as an indication of the amount of heat (Btu's) being transferred or as a totalized amount.

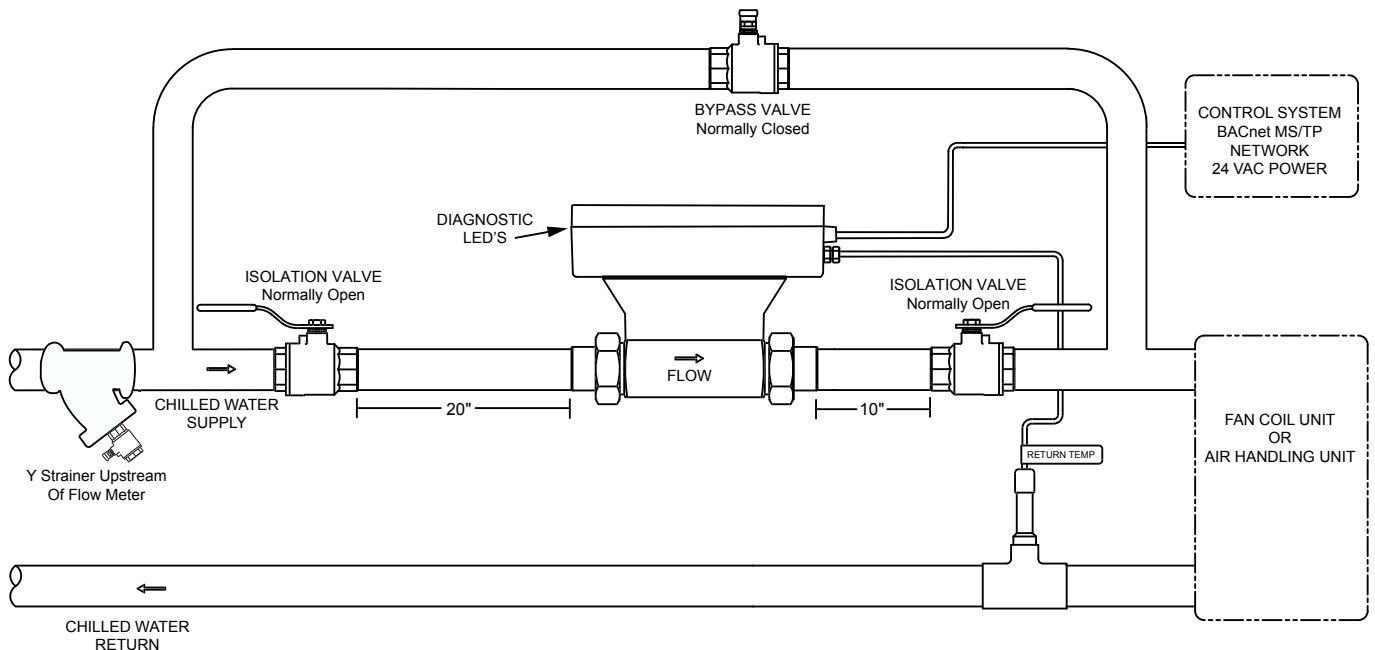

1.3 STANDARD FEATURES AND SPECIFICATIONS

- Single mode Btu calculations, in either the heating or cooling mode, are totalized and reported.
- Two-pipe dual mode Btu calculations in both the heating mode and the cooling mode are totalized and reported separately.

GENERAL SPECIFICATIONS

CALIBRATION

Flow sensor and temperature sensors are individually calibrated, followed by a complete system calibration. Field commissioning is also available.

ACCURACY

Differential temperature accuracy $\pm 0.15^\circ$ F over calibrated range

Computing non-linearity within $\pm 0.05\%$

Flow sensor accuracy:

$\pm 0.5\%$ OF READING at calibrated velocity

$\pm 1\%$ OF READING from 3 to 30 ft/s (10:1 range)

$\pm 2\%$ OF READING from 0.4 to 20 ft/s (50:1 range)

TEMPERATURE SENSORS

Solid state sensors are custom calibrated using N.I.S.T. traceable temperature standards.

PROGRAMMING

Factory programmed for each specific application

MEMORY

Nonvolatile EEPROM memory retains all program parameters and totalized values in the event of power loss.

OUTPUT SIGNALS

Isolated solid state dry contacts for mode 1 and mode 2 energy total

Contact rating: 100 mA, 50VDC maximum

Contact duration: 0.5, 1, 2 or 6 sec selectable

NETWORK INTERFACE

BACnet MS/TP Protocol

RS485, 2-wire (half duplex)

BACnet DEVICE OBJECTS

Total Energy (Btu, ton-hr(s), kw-hr)

Energy Rate (Btu/hr, tons, kw)

Total Flow (gallons, liters, cubic meters)

Flow Rate (gpm, l/s, l/m, m³/hr)

Supply Temperature ($^\circ$ F, $^\circ$ C)

Return Temperature ($^\circ$ F, $^\circ$ C)

Mode (Heating-Cooling) Indicator

BAUD RATE

76800, 38400, 19200, or 9600 bps

OPTIONAL LOCAL DISPLAY

Alphanumeric LCD displays total energy, total, flow, energy rate, flow rate, supply temperature and return temperature

Alpha: 16 characters, 0.2" high

Numeric: 6 digit, 0.4" high

MAINTENANCE

ONICON recommends periodic inspection and recalibration. No other periodic maintenance is required.

TEMPERATURE RANGE

Liquid temperature range: 32° to 200° F

Ambient temperature range: 40° to 120° F

MECHANICAL

OVERALL DIMENSION:

9.25" L x 5" W x 6.5" H

TEMPERATURE THERMOWELL:

Brass thermowell ($\frac{1}{2}$ " sweat or $\frac{1}{4}$ " NPT)

ELECTRICAL

This equipment is intended for INSTALLATION CATEGORY (OVERVOLTAGE CATEGORY) II applications

INPUT VOLTAGE: 24 V $\pm 10\%$ AC 50/60 Hz or 24 V ± 4 DC

INPUT CURRENT: 200 mA maximum

TERMINALS CONNECTIONS: Use 18-22 ga. Copper wire. Do not exceed 4.5 in-lb (0.5 Nm) of torque when tightening.

WIRING:

CONDUIT: Use PVC jacketed copper cable with a wire gauge suitable for the length of run and required maximum current carrying capacity. The installation must comply with all local, state and federal codes.

PLENUM AREA: (without conduit) Use plenum rated copper cable with a wire gauge suitable for the length of run and required maximum current carrying capacity. The installation must comply with all local, state and federal building codes.

Note: Specifications are subject to change without notice.

1.4 WORKING ENVIRONMENT

The SYSTEM-30 was designed for installation and use in typical commercial and residential environments that are free of corrosive liquids and fumes, direct liquid exposure, heavy condensation, and temperature extremes and vibrations.

The operating ambient air temperature range is 40° F to 120° F.

The electrical power should be relatively clean, free of high frequency noise, large voltage transients, and protected from power surges and brown outs.

1.5 WARRANTY & SERIAL NUMBER

Warranty

ONICON's 2-year "No-fault" warranty reduces start-up costs with extended coverage that includes coverage for incidental damage during installation. Certain exclusions apply. See our complete warranty statement for details.

Serial Number

The serial number of your SYSTEM-30 is located on the side of the enclosure. Serial numbers are unique identifiers that you should have available when contacting the factory for assistance regarding your system.

SECTION 2.0: UNPACKING

The SYSTEM-30 generally ships in one package unless optional hardware or equipment is ordered. If any items are damaged, notify the shipping company (all products are shipped insured) and the ONICON Customer Service Department.

2.1 CHECKING THAT YOU HAVE RECEIVED EVERYTHING

Standard Documentation

Enclosed with each SYSTEM-30 is a comprehensive documentation package that includes the following items:

The SYSTEM-30 BTU MEASUREMENT SYSTEM Installation and Operation Guide
The System-30 Calibration Data Sheet
Typical Installation Drawing
Wiring Diagram

Please notify ONICON immediately if any items are missing.

The Main Unit

Remove the System-30 from the shipping carton and inspect it for physical damage.

Temperature Sensors

One temperature sensor is built-in to the body of the meter and the other is connected to the main unit via a permanently attached cable. Inspect the free sensor and cable for external damage.

Temperature Thermowell

A standard thermowell with installation hardware is packed with the main unit.

Mounting Hardware

The System-30 is supplied with two tail pieces to facilitate connection to the piping system. A compression fitting with retaining nut makes up one end of each tail piece. The other end will either be a sweat fitting for copper or a threaded nipple with NPT threads.

SECTION 3.0: INSTALLATION

The SYSTEM-30 BTU MEASUREMENT SYSTEM should be installed by experienced plumbers and others with related knowledge and experience in the heating, cooling, and fluid metering fields. ONICON will be happy to assist with technical recommendations and to provide guidance by telephone and/or mail. On-site field engineering, installation, and/or service is also available at an additional cost.

The installer should use good trade practices and adhere to all state and local building or other applicable codes.



CAUTION

ONICON strongly recommends the use of a valved bypass and strainer in conjunction with the installation of the System-30 to facilitate servicing and to protect the turbine assembly during start-up.

3.1 SITE SELECTION

Careful attention to the site selection for the system components will help the installers with the initial installation, reduce start-up problems, and make future maintenance easier. For example, do not install the System-30 or its temperature sensor where it will be difficult for personnel to perform periodic maintenance and calibration. When selecting a site for mounting the system components, consider the criteria under Section 1.4, WORKING ENVIRONMENT, as well as the following:

The Main Unit

Choose the location (supply or return) with the longest straight, unobstructed run. Ideally, the location chosen should allow for at least 20 diameters of unobstructed straight run upstream of the meter and at least 10 diameters of unobstructed straight run downstream. If both the supply and return have adequate straight run conditions, locate the meter in the supply.

The location must be accessible to facilitate service and recalibration.


The Temperature Sensor

The temperature sensor should be located in an accessible location. This will facilitate any on-site service.

Place the temperature sensor away from sources of electrical noise that might interfere with the temperature sensor signal.

3.2 MECHANICAL INSTALLATION

3.2.1 Main Unit Installation

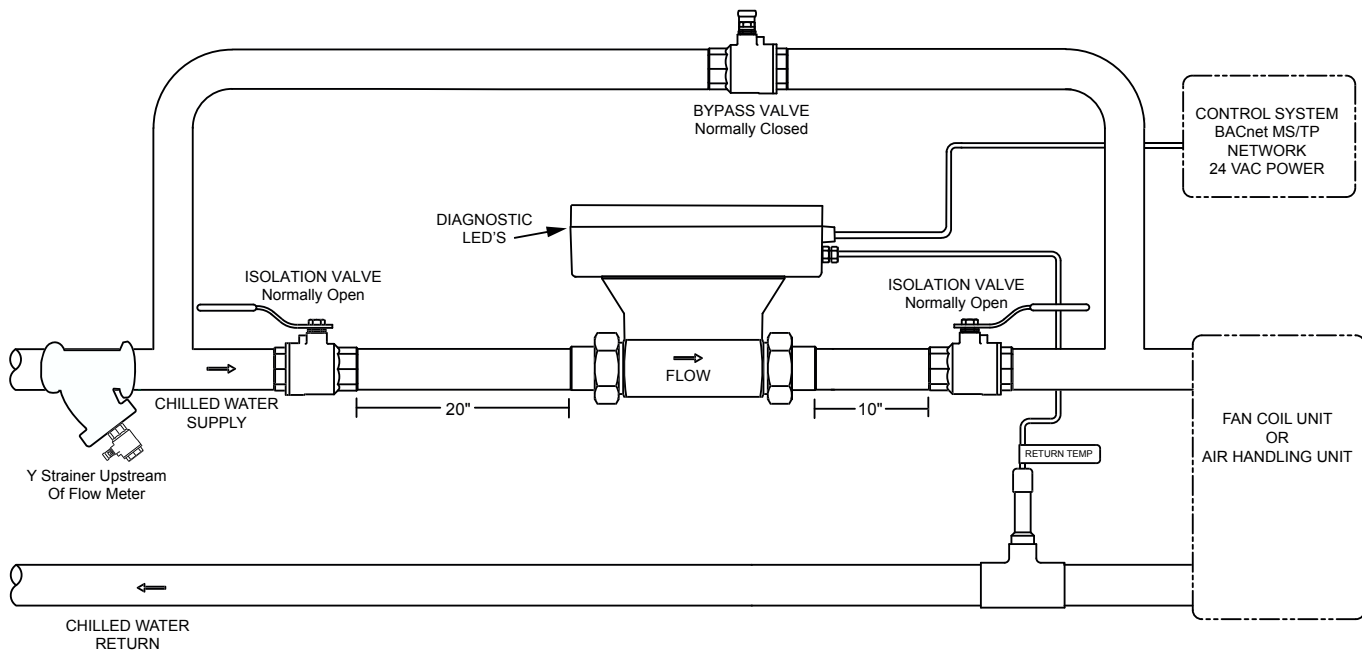

Find an easily accessible location where wire connections can be made and the diagnostic LED's can be viewed from floor level. The location where the main unit is mounted should be free from vibration. Clean the external surface of the pipe at the installation site so that it is free of debris, foreign matter, solids, leak inhibitors, and chemically aggressive substances. Next, locate the tail pieces that were shipped with the main unit and install these on the pipe making certain that the compression nuts are correctly oriented. Wherever appropriate, use pipe dope on threaded connections to ensure a leak free seal. **DO NOT USE TEFLON TAPE.**

Insert the main unit between the two open ends of the pipe and secure in place using the compression fittings. **MAKE CERTAIN THAT THE FLOW DIRECTION ARROW ON THE BODY OF THE MAIN UNIT IS POINTING IN THE DIRECTION OF FLOW.**



CAUTION

Before you attempt to use the BTU MEASUREMENT SYSTEM, isolate the main unit, open the bypass and flush the entire system so that it is free of flux, solder, pipe and tube cuttings and any other free moving particles.

3.2.2 Thermowell Installation




IMPORTANT NOTE

It is important that no dirt or other foreign material be allowed into the thermowell as this could affect the thermal response of the system.

Standard Thermowell

The most common installation methods are shown below. Consult the factory for special applications.

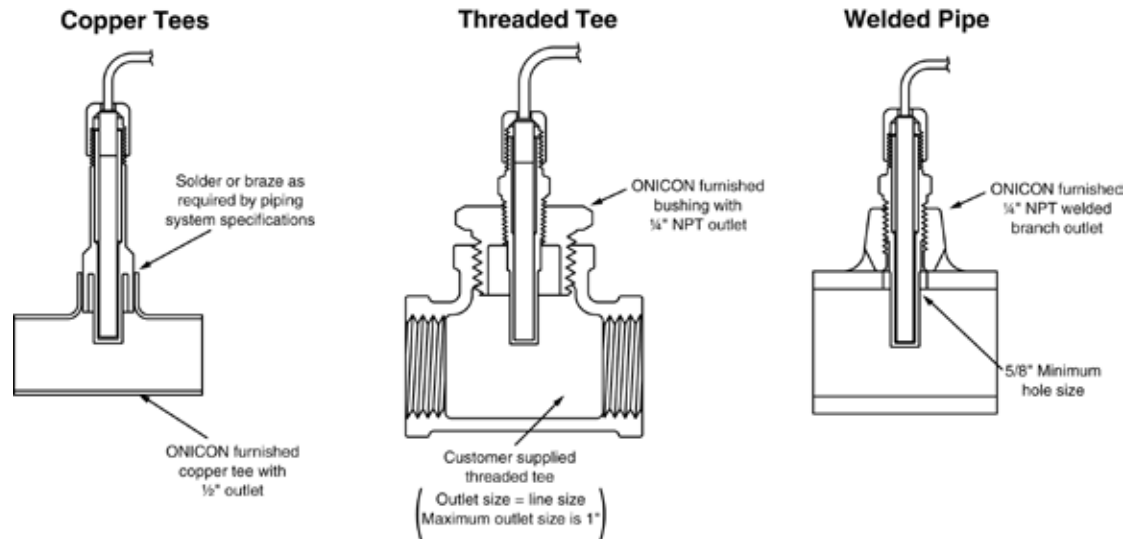

3.2.3 Temperature Sensor Installation

The temperature sensor is factory matched and permanently attached to the BTU MEASUREMENT SYSTEM. Sensors from different Btu meters cannot be used without being returned to the factory for recalibration.



Apply a thin coat of thermally conductive grease to the temperature sensor, and gently insert the temperature sensor all the way into the thermowell until it contacts the bottom of the cavity. Gently tighten the retainer cap. **DO NOT OVER TIGHTEN.** The thermowell completely seals the plumbing system without the retainer cap. The only purpose of the cap is to keep the sensor from losing contact with the bottom of the thermowell cavity.




CAUTION

Cable length is specified at time of order. This is three wire shielded plenum rated cable. Altering the cable length will affect calibration. Do not change the cable length without consulting ONICON.


THERMOWELL INSTALLATION IN THREADED PIPE TEES

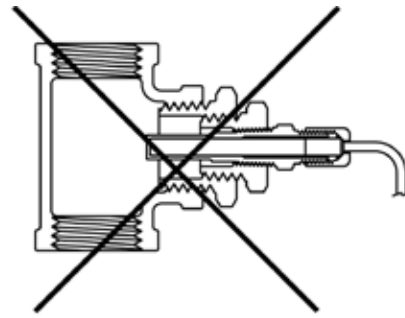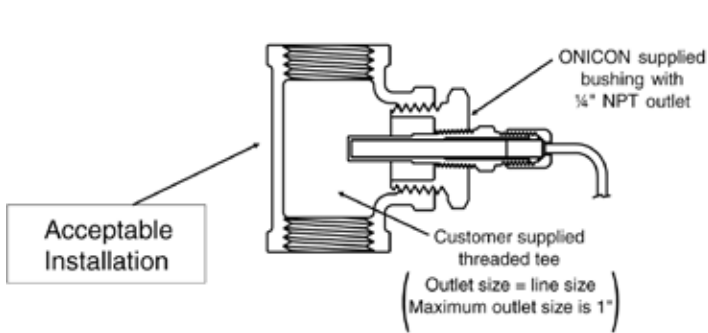


DO NOT INSTALL MORE THAN ONE BUSHING.
Use no more than one bushing, or the temperature data will not be correct!

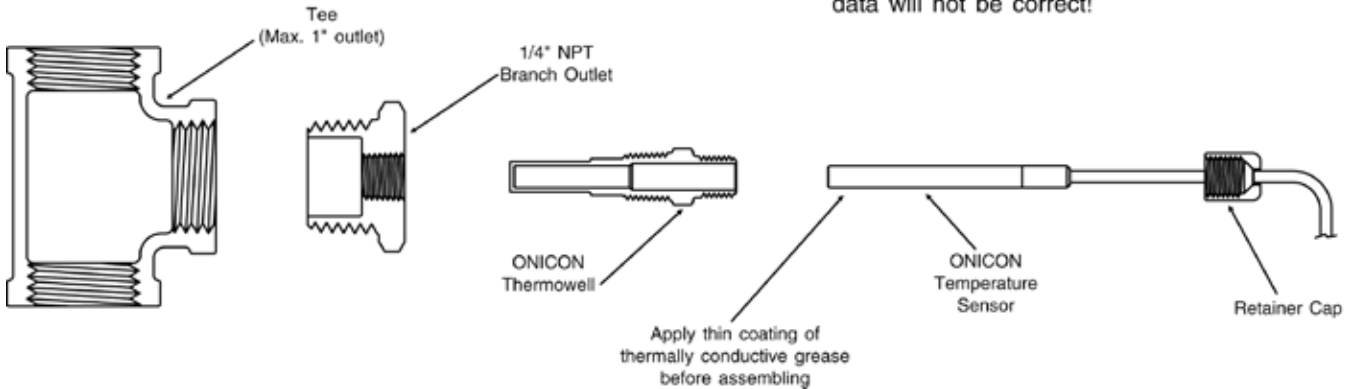


THERMOWELL INSTALLATION IN COPPER TEE

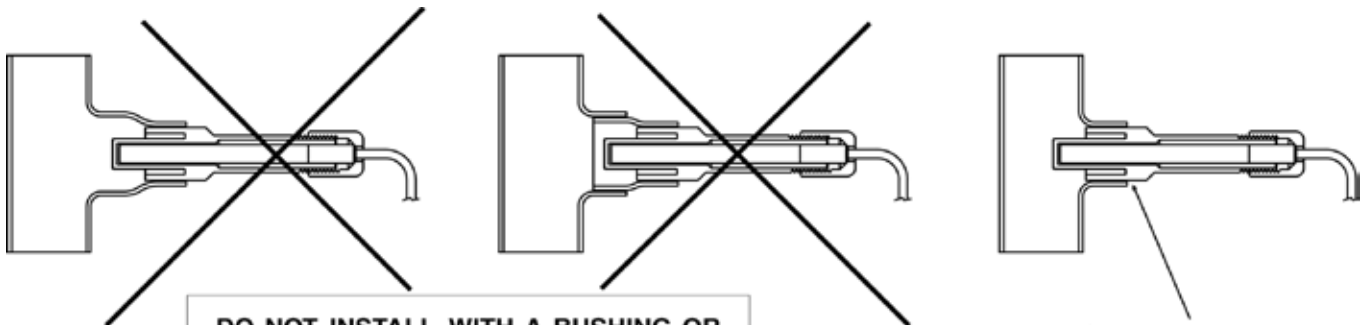


DO NOT INSTALL WITH A BUSHING OR TEE WITH EXTENDED BRANCH OUTLET.
Install thermowell directly into the ONICON furnished tee only or the temperature data will not be correct!

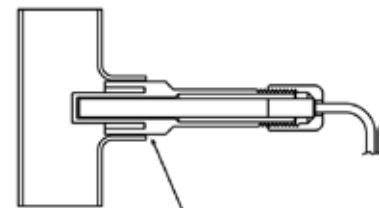

Solder or Braze as required by piping system specifications

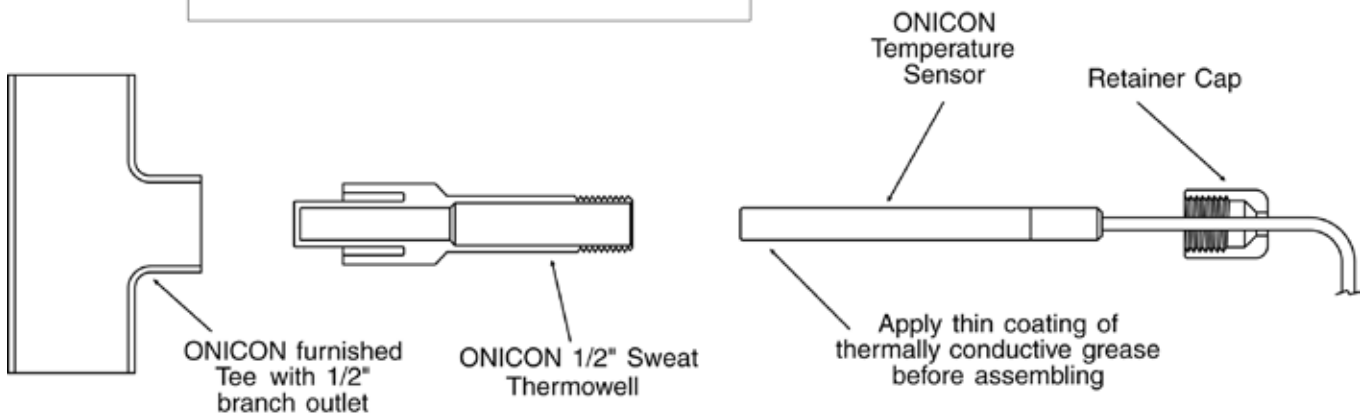

THERMOWELL INSTALLATION IN WELDED PIPE

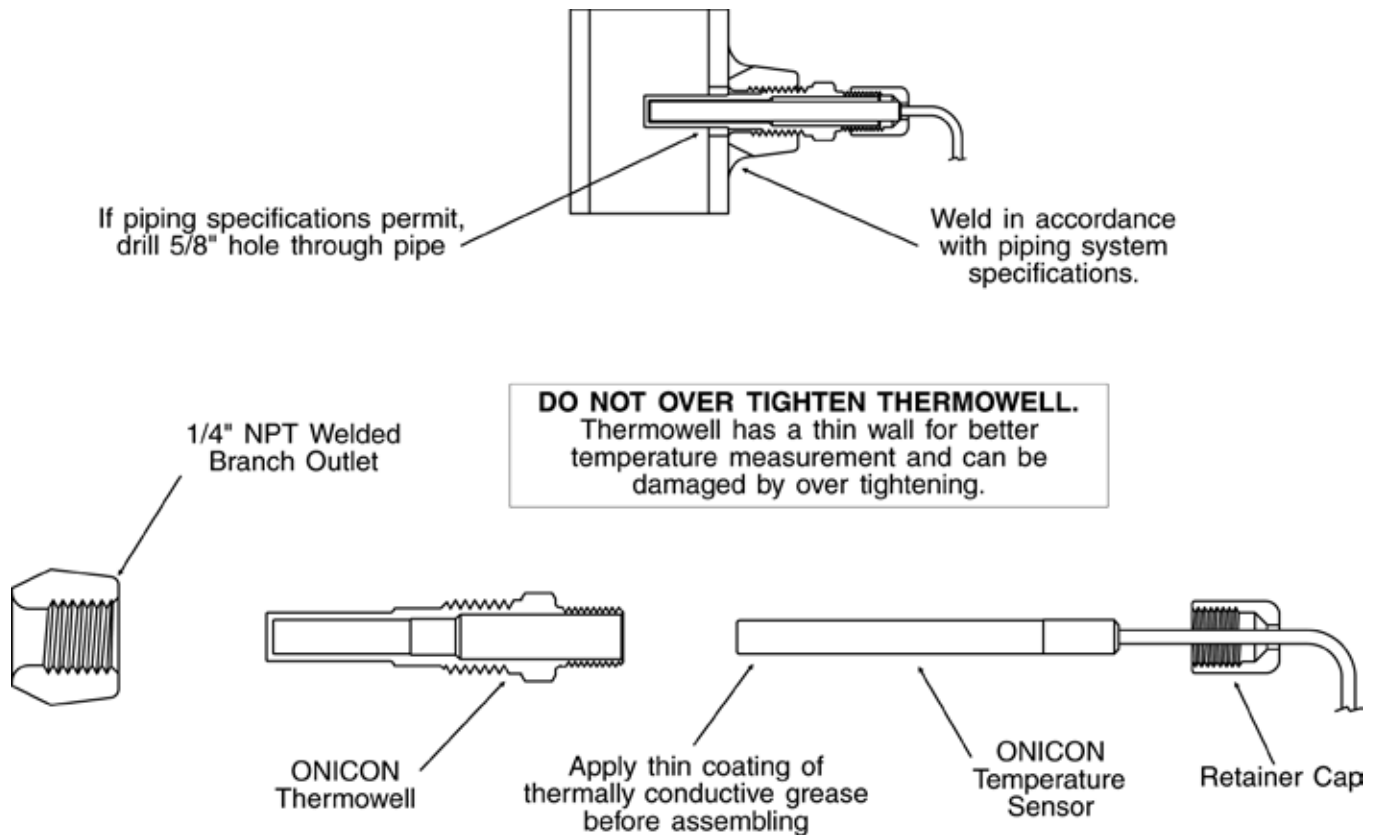

3.3 ELECTRICAL INSTALLATION

All user supplied conduit fittings, junction boxes, etc. are to be installed as required by legal codes.

IMPORTANT NOTE

i

The System-30-BAC BTU Meter is designed with one internal (Temp1) and one remote (Temp 2) temperature sensor. If the meter body is located in the supply pipe then the internal temperature sensor will indicate the supply temperature and the remote sensor will indicate the return temperature. This relationship will reverse if the meter body is located in the return pipe. The location of the meter will also affect the logic used to determine mode 1 and mode 2 operations for dual mode applications. Single mode energy measurements are absolute measurements and are not effected by polarity of the Delta t.

3.3.1 Single Mode (4 Pipe) Vs. Dual Mode (2 Pipe) Operation


ONICON System 30 BTU Meters may be configured for single or dual mode applications. Single and dual mode is a reference to the piping system and not the meter itself. Single mode (4 pipes) applications are those that always have the same relationship between the supply and return pipe temperatures. In dual mode (2 pipes) applications the polarity of the temperature differential (Delta t) reverses; often on a seasonal basis.

It is often desirable to totalize the amount of energy transferred in each mode in separate registers. For these applications, ONICON BTU meters may be configured for dual mode operation. In this configuration, the meter will measure and totalize energy in separate registers based on the polarity of the Delta t.

The drawings and tables below illustrate the relationship between meter location, temperature sensor and mode of operation.


Temperature Sensor/ Mode of Operation Relationship with Meter in Supply Line

Supply Temp	Temperature 1 Sensor (Internal Sensor)
Return Temp	Temperature 2 Sensor (External Sensor)
Mode 1 Total	Heating (Supply Temp > Return Temp)
Mode 2 Total	Cooling (Supply Temp < Return Temp)

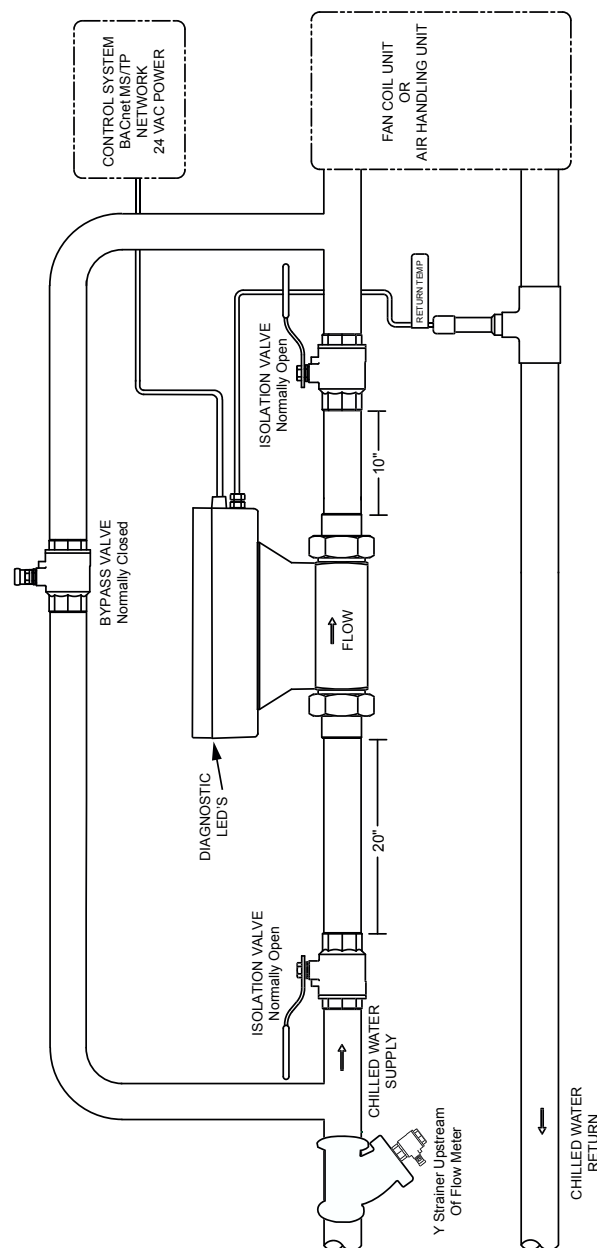



Temperature Sensor/ Mode of Operation Relationship with Meter in Return Line

Supply Temp	Temperature 2 (External Sensor)
Return Temp	Temperature 1 (Internal Sensor)
Mode 1 Total	Cooling (Supply Temp < Return Temp)
Mode 2 Total	Heating (Supply Temp > Return Temp)

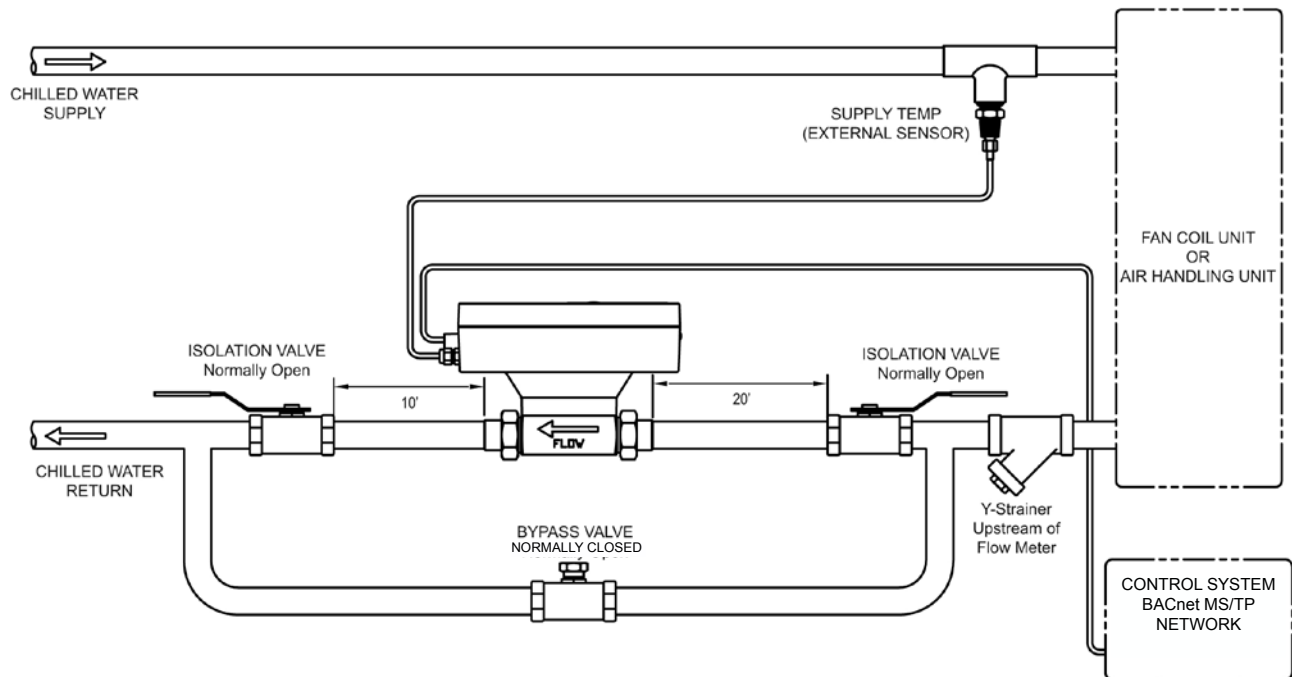

3.3.2 Electrical Wiring

Connect all Btu meter signal outputs to terminal strip TB1 and/or TB4 (optional communication output) as shown below. Then connect the 24 V AC/DC input power to terminal strip TB1. The standard SYSTEM-30 is configured for 24 V AC 50/60 Hz operation or 24 V DC operation. Do not connect the 24 V AC/DC source until all other signal connections have been made and verified.

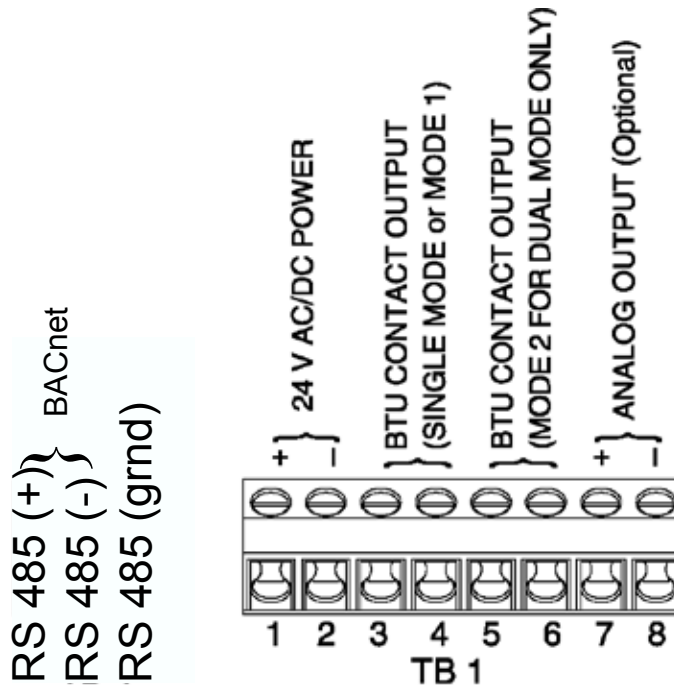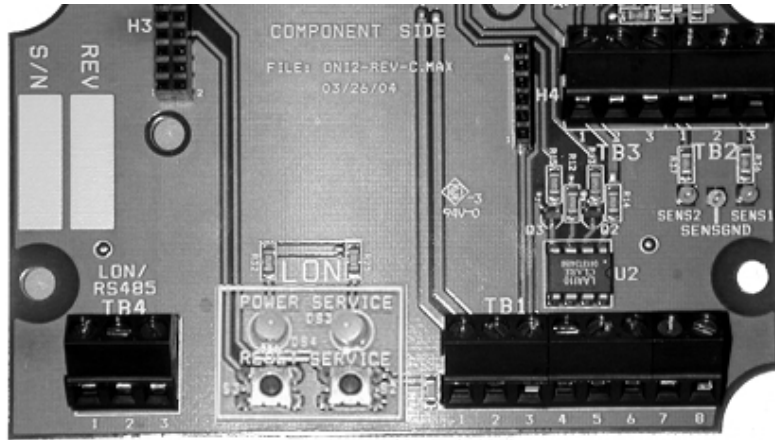

CAUTION



Only qualified service personnel should make connections between the System-30-BAC BTU Meter and the user's external equipment. ONICON assumes no responsibility for damaged caused tot he external equipment as a result of an improper installation.

SECTION 4.0: START UP AND COMMISSIONING

4.1 DISPLAY AND USER INTERFACE (If display ordered)

The System 30 may be ordered from the factory with an optional display and user interface.


The display consists of 2 lines of alphanumeric characters. Line 1 indicates the current value while the bottom line identifies the engineering units and multiplier values that apply to the current value displayed on line 1. In the example shown the current value is 3864, the engineering units are Btu's and the multiplier is 10,000. This would be read as 38,640,000 Btu's.

The user interface consists of 3 pushbutton switches. These 3 switches allow the user to operate the display and program the meter.

When operating in the run mode, the scroll button advances the display from one parameter to the next. A total of up to 8 different operating parameters may be available for display depending on whether the meter is being used in a single mode or dual mode application.

When operating in the run mode, the reset button (if enabled) allows the user to reset volume and energy totals.

The program button is not functional in the run mode.

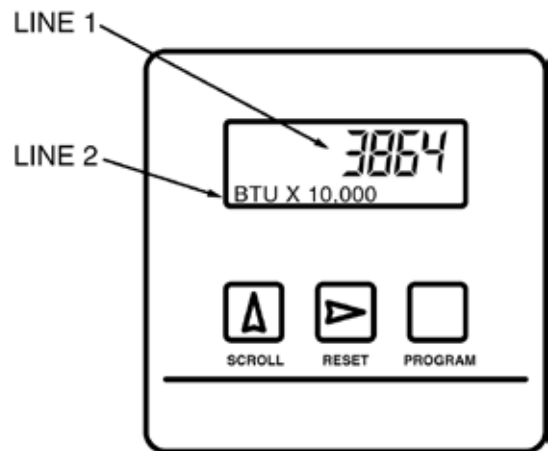

4.2 PROCESSOR START-UP

When power is applied to the BTU Meter alphanumeric characters appear on the two lines of the display, indicating the meter is operating. Press and release the SCROLL button on the front panel. Observe the display cycle to the next display page.

Select the SUPPLY TEMP Page. Note the displayed temperature. Confirm that it is in the expected range. Now select the RETURN TEMP page. Again note the displayed temperature. Confirm that it is also in the correct range.

Select the FLOW RATE page. Note the displayed flow rate. Confirm that the flow rate value is in the correct range.

Successively pressing the SCROLL button will cycle the display through the run mode pages summarized in the tables on the next page.

Single Mode Operation

SINGLE MODE BTU METERS – RUN MODE DISPLAY PAGES		
PAGE No.	DISPLAY NAME	SELECTABLE UNITS
1	ENERGY TOTAL	BTU, TONHR or KWHR
2	VOLUME TOTAL	GAL, LITER, METERS ³
3	ENERGY RATE	BTU / HR, TONS, KW
4	VOLUME RATE	GPM, GPH, MGD, L/SEC, L/MIN, L/HR, METERS ³ /HR
5	INTRN TEMP	DEG F, DEG C
6	EXTRN TEMP	DEG F, DEG C

Dual Mode BTU Meters

DUAL MODE BTU METERS – RUN MODE DISPLAY PAGES		
PAGE No.	DISPLAY NAME	SELECTABLE UNITS
1	MODE 1 ENERGY TOTAL	BTU, TONHR or KWHR
2	MODE 1 VOLUME TOTAL	GAL, LITER, METERS ³
3	MODE 2 ENERGY TOTAL	BTU or TONHR
4	MODE 2 VOLUME TOTAL	GAL, LITER, METERS ³
5	ENERGY RATE	BTU / HR, TONS or KW
6	VOLUME RATE	GPM, GPH, MGD, L/SEC, L/MIN, L/HR, METERS ³ /HR
7	INTRN TEMP	DEG F, DEG C
8	EXTRN TEMP	DEG F, DEG C

The operating mode, measurement units and multipliers are programmed into the Btu meter at the factory. These settings may be re-programmed in the field. Please contact ONICON technical support personnel for assistance, if changes are required.

4.3 DISPLAY AND PULSE OUTPUT UNITS AND MULTIPLIERS

The units and multipliers are programmed prior to delivery. Contact ONICON's technical support personnel for assistance in changing units or multipliers.

4.4 BACnet NETWORK ADDRESSING

The BACnet MS/TP network requires 2 separate addresses in order to function.

The first address is the MAC (station) address and may be set to any address from 001 to 254. In compliance with the BACnet standard, addresses 128 to 254 are reserved exclusively for slave devices. Slave devices cannot be auto-discovered on the network.

The second address is the device instance number (Node ID) and may be set to any address from 1 to 4,194,303. If the System-30 is provided with the optional user interface/display, the device instance number may be set by entering the change address mode. The number may also be changed via the BACnet network.

4.4.1 Changing the MAC Address

Every ONICON BTU Meter is individually programmed at the factory with application specific data provided by the customer during the ordering process, and this may include network addressing information. If MAC address information was provided, the Btu meter will be programmed with that number. If no address is provided, ONICON BTU Meters are programmed with a default MAC address of 017.

4.4.2 Changing the Device Instance Number

The number may be changed via the BACnet network. To change the device instance number, first connect the meter to the BACnet network. Power the meter and discover the new device. The default network addresses are 017 (MAC) and 57017 (Device Instance). Once the device is found on the network, write the new device instance number to BACnet object AV13. Allow a few seconds for the new address to be written back to the Btu meter and re-discover the device on the network.



NETWORK ADDRESS DIP SWITCH VALUES	
SWITCH	VALUE
A1	1
A2	2
A3	4
A4	8
A5	16
A6	32
A7	64
A8	128

DEVICE ADDRESS	DIP SWITCH SETTINGS							
	1	2	3	4	5	6	7	8
1	ON							
2		ON						
3	ON	ON						
4			ON					
5	ON		ON					
6		ON	ON					
7	ON	ON	ON					
8				ON				
9	ON			ON				
10		ON		ON				
11	ON	ON		ON				
12			ON	ON				
13	ON		ON	ON				
14		ON	ON	ON				
15	ON	ON	ON	ON				
16					ON			
17	ON				ON			
18		ON			ON			
19	ON	ON			ON			
20			ON		ON			
21	ON		ON		ON			
22		ON	ON		ON			
23	ON	ON	ON		ON			
24				ON	ON			
25	ON			ON	ON			
26		ON		ON	ON			
27	ON	ON		ON	ON			
28			ON	ON	ON			
29	ON		ON	ON	ON			
30		ON	ON	ON	ON			
31	ON	ON	ON	ON	ON			
32						ON		
33	ON					ON		
34		ON				ON		
35	ON	ON				ON		
36			ON			ON		
37	ON		ON			ON		
38		ON	ON			ON		
39	ON	ON	ON			ON		
40				ON		ON		
41	ON			ON		ON		
42		ON		ON		ON		
43	ON	ON		ON		ON		

	1	2	3	4	5	6	7	8
44			ON	ON		ON		
45	ON		ON	ON		ON		
46		ON	ON	ON		ON		
47	ON	ON	ON	ON		ON		
48					ON	ON		
49	ON				ON	ON		
50		ON			ON	ON		
51	ON	ON			ON	ON		
52			ON		ON	ON		
53	ON		ON		ON	ON		
54		ON	ON		ON	ON		
55	ON	ON	ON		ON	ON		
56				ON	ON	ON		
57	ON			ON	ON	ON		
58		ON		ON	ON	ON		
59	ON	ON		ON	ON	ON		
60			ON	ON	ON	ON		
61	ON		ON	ON	ON	ON		
62		ON	ON	ON	ON	ON		
63	ON	ON	ON	ON	ON	ON		
64							ON	
65	ON						ON	
66		ON					ON	
67	ON	ON					ON	
68			ON				ON	
69	ON		ON				ON	
70		ON	ON				ON	
71	ON	ON	ON				ON	
72				ON			ON	
73	ON			ON			ON	
74		ON		ON			ON	
75	ON	ON		ON			ON	
76			ON	ON			ON	
77	ON		ON	ON			ON	
78		ON	ON	ON			ON	
79	ON	ON	ON	ON			ON	
80					ON		ON	
81	ON				ON		ON	
82		ON			ON		ON	
83	ON	ON			ON		ON	
84			ON		ON		ON	
85	ON		ON		ON		ON	
86		ON	ON		ON		ON	
87	ON	ON	ON		ON		ON	

	1	2	3	4	5	6	7	8
88				ON	ON		ON	
89	ON			ON	ON		ON	
90		ON		ON	ON		ON	
91	ON	ON		ON	ON		ON	
92			ON	ON	ON		ON	
93	ON		ON	ON	ON		ON	
94		ON	ON	ON	ON		ON	
95	ON	ON	ON	ON	ON		ON	
96						ON	ON	
97	ON					ON	ON	
98		ON				ON	ON	
99	ON	ON				ON	ON	
100			ON			ON	ON	
101	ON		ON			ON	ON	
102		ON	ON			ON	ON	
103	ON	ON	ON			ON	ON	
104				ON		ON	ON	
105	ON			ON		ON	ON	
106		ON		ON		ON	ON	
107	ON	ON		ON		ON	ON	
108			ON	ON		ON	ON	
109	ON		ON	ON		ON	ON	
110		ON	ON	ON		ON	ON	
111	ON	ON	ON	ON		ON	ON	
112					ON	ON	ON	
113	ON				ON	ON	ON	
114		ON			ON	ON	ON	
115	ON	ON			ON	ON	ON	
116			ON		ON	ON	ON	
117	ON		ON		ON	ON	ON	
118		ON	ON		ON	ON	ON	
119	ON	ON	ON		ON	ON	ON	
120				ON	ON	ON	ON	
121	ON			ON	ON	ON	ON	
122		ON		ON	ON	ON	ON	
123	ON	ON		ON	ON	ON	ON	
124			ON	ON	ON	ON	ON	
125	ON		ON	ON	ON	ON	ON	
126		ON	ON	ON	ON	ON	ON	
127	ON	ON	ON	ON	ON	ON	ON	
128								ON
129	ON							ON
130		ON						ON
131	ON	ON						ON

	1	2	3	4	5	6	7	8
132			ON					ON
133	ON		ON					ON
134		ON	ON					ON
135	ON	ON	ON					ON
136				ON				ON
137	ON			ON				ON
138		ON		ON				ON
139	ON	ON		ON				ON
140			ON	ON				ON
141	ON		ON	ON				ON
142		ON	ON	ON				ON
143	ON	ON	ON	ON				ON
144					ON			ON
145	ON				ON			ON
146		ON			ON			ON
147	ON	ON			ON			ON
148			ON		ON			ON
149	ON		ON		ON			ON
150		ON	ON		ON			ON
151	ON	ON	ON		ON			ON
152				ON	ON			ON
153	ON			ON	ON			ON
154		ON		ON	ON			ON
155	ON	ON		ON	ON			ON
156			ON	ON	ON			ON
157	ON		ON	ON	ON			ON
158		ON	ON	ON	ON			ON
159	ON	ON	ON	ON	ON			ON
160						ON		ON
161	ON					ON		ON
162		ON				ON		ON
163	ON	ON				ON		ON
164			ON			ON		ON
165	ON		ON			ON		ON
166		ON	ON			ON		ON
167	ON	ON	ON			ON		ON
168				ON		ON		ON
169	ON			ON		ON		ON
170		ON		ON		ON		ON
171	ON	ON		ON		ON		ON
172			ON	ON		ON		ON
173	ON		ON	ON		ON		ON
174		ON	ON	ON		ON		ON
175	ON	ON	ON	ON		ON		ON

	1	2	3	4	5	6	7	8
176					ON	ON		ON
177	ON				ON	ON		ON
178		ON			ON	ON		ON
179	ON	ON			ON	ON		ON
180			ON		ON	ON		ON
181	ON		ON		ON	ON		ON
182		ON	ON		ON	ON		ON
183	ON	ON	ON		ON	ON		ON
184				ON	ON	ON		ON
185	ON			ON	ON	ON		ON
186		ON		ON	ON	ON		ON
187	ON	ON		ON	ON	ON		ON
188			ON	ON	ON	ON		ON
189	ON		ON	ON	ON	ON		ON
190		ON	ON	ON	ON	ON		ON
191	ON	ON	ON	ON	ON	ON		ON
192							ON	ON
193	ON						ON	ON
194		ON					ON	ON
195	ON	ON					ON	ON
196			ON				ON	ON
197	ON		ON				ON	ON
198		ON	ON				ON	ON
199	ON	ON	ON				ON	ON
200				ON			ON	ON
201	ON			ON			ON	ON
202		ON		ON			ON	ON
203	ON	ON		ON			ON	ON
204			ON	ON			ON	ON
205	ON		ON	ON			ON	ON
206		ON	ON	ON			ON	ON
207	ON	ON	ON	ON			ON	ON
208					ON		ON	ON
209	ON				ON		ON	ON
210		ON			ON		ON	ON
211	ON	ON			ON		ON	ON
212			ON		ON		ON	ON
213	ON		ON		ON		ON	ON
214		ON	ON		ON		ON	ON
215	ON	ON	ON		ON		ON	ON
216				ON	ON		ON	ON
217	ON			ON	ON		ON	ON
218		ON		ON	ON		ON	ON
219	ON	ON		ON	ON		ON	ON

	1	2	3	4	5	6	7	8
220			ON	ON	ON		ON	ON
221	ON		ON	ON	ON		ON	ON
222		ON	ON	ON	ON		ON	ON
223	ON	ON	ON	ON	ON		ON	ON
224						ON	ON	ON
225	ON					ON	ON	ON
226		ON				ON	ON	ON
227	ON	ON				ON	ON	ON
228			ON			ON	ON	ON
229	ON		ON			ON	ON	ON
230		ON	ON			ON	ON	ON
231	ON	ON	ON			ON	ON	ON
232				ON		ON	ON	ON
233	ON			ON		ON	ON	ON
234		ON		ON		ON	ON	ON
235	ON	ON		ON		ON	ON	ON
236			ON	ON		ON	ON	ON
237	ON		ON	ON		ON	ON	ON
238		ON	ON	ON		ON	ON	ON
239	ON	ON	ON	ON		ON	ON	ON
240					ON	ON	ON	ON
241	ON				ON	ON	ON	ON
242		ON			ON	ON	ON	ON
243	ON	ON			ON	ON	ON	ON
244			ON		ON	ON	ON	ON
245	ON		ON		ON	ON	ON	ON
246		ON	ON		ON	ON	ON	ON
247	ON	ON	ON		ON	ON	ON	ON
248				ON	ON	ON	ON	ON
249	ON			ON	ON	ON	ON	ON
250		ON		ON	ON	ON	ON	ON
251	ON	ON		ON	ON	ON	ON	ON
252			ON	ON	ON	ON	ON	ON
253	ON		ON	ON	ON	ON	ON	ON
254		ON	ON	ON	ON	ON	ON	ON



4.5 BAUD RATE

Every ONICON Btu meter is individually programmed at the factory with application specific data provided by the customer during the process of ordering the meter. This normally includes the Baud rate setting. If the Baud rate was provided, the Btu meter will be configured to operate at the specified rate. The standard Baud rate settings are 9600, 19200, 38400 and 76800 Baud.

If the Baud rate setting was not provided to ONICON, the Btu meter will be configured to “auto” detect the Baud rate of the network. In this configuration, the meter should detect and automatically adjust to the proper rate when the meter is connected to the network.

The Baud rate setting can be manually changed in the field. The drawing and table below show the Baud rate dipswitch settings.

B1	B2	B3	B4	Rate
0	0	0	0	Autobaud
1	0	0	0	9600
0	1	0	0	19200
0	0	1	0	38400
0	0	0	1	76800

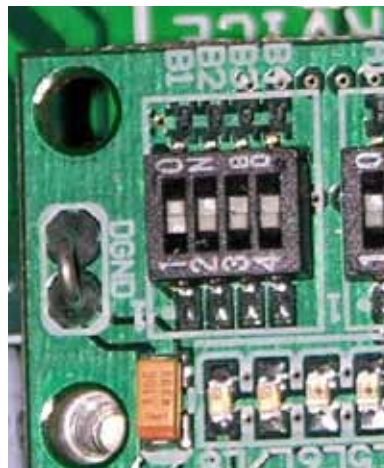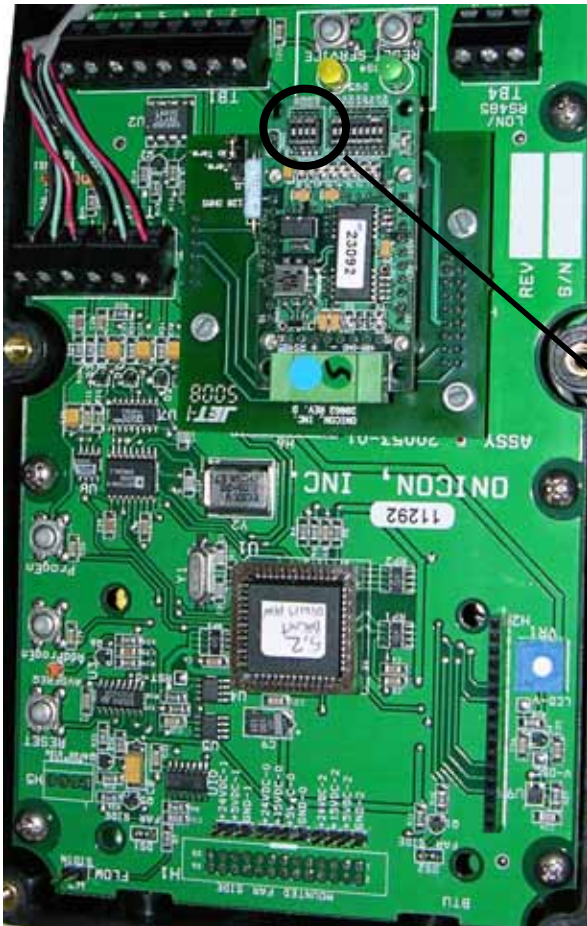

Baud Rate Dip Switches

4.6 BACnet OBJECTS

The System-30 BTU Meter operates in one of two operating modes, SINGLE or DUAL. The table below contains point information for each of the operating modes.

In SINGLE mode operation only one register accumulates energy and one register accumulates volume. Thus, only two AV points and two BV reset points are necessary.

BACnet OBJECT	OBJECT DESCRIPTION	UNITS	NOTES
Analog Input 1	Energy Rate	Btu/Hr, kW or Tons	
Analog Input 2	Volume Rate	L/Sec, L/Min, L/Hr, M3/Hr or GPM	
Analog Input 3	Supply Temperature	Degrees C or F	
Analog Input 4	Return Temperature	Degrees C or F	
Analog Value 1	Mode 1 Energy Total	Btu, TonHrs or kWhrs	
Analog Value 2	Mode 1 Volume Total	Liters, M ³ or Gallons	
Analog Value 3	Mode 2 Energy Total	Btu, ton-hrs or kW-hrs	(Only used in dual-mode applications)
Analog Value 4	Mode 2 Volume Total	Liters, M ³ or Gallons	(Only used in dual-mode applications)
Analog Value 5	Auxiliary Input Total	None	BACnet will not report engineering units for this object
Analog Value 6	Operating Mode (Single, Dual or Bidirectional)	Not Applicable	None = 0 Single = 1 Dual = 2 BiDir = 3
Analog Value 12	Mode 1 Mode 2 Indication	Not Applicable	Mode 1 = 1 Mode 2 = 2
Analog Value 13	Device Instance Number	Not Applicable	Range: 0 - 4,194,303
Binary Value 11	Zero Mode 1 Energy Total	Not Applicable	Changing this property from the (0) inactive state to the (1) active state will reset the total to zero. (Must be priority 8 manual operator)
Binary Value 12	Zero Mode 1 Volume Total	Not Applicable	
Binary Value 13	Zero Mode 2 Energy Total	Not Applicable	
Binary Value 14	Zero Mode 2 Volume Total	Not Applicable	
Binary Value 15	Zero Auxiliary Input Total	Not Applicable	

4.7 DIAGNOSTICS

The ONICON System-30 BTU MEASUREMENT SYSTEM uses a microprocessor to calculate energy. Factory programmed settings provide energy total outputs in accordance with the customer's application data. An optional isolated analog output for energy rate, flow rate or delta T may also be available. Refer to the Btu meter calibration sheet for a complete listing of factory settings. These settings cannot be changed in the field. Contact ONICON factory service personnel if changes to the calibration are required.

The System-30 is equipped with diagnostic indicator lights that confirm the operation of the microprocessor and its input circuitry.



Please contact the ONICON factory service personnel if either of the diagnostic lights indicate a potential problem with the operation of the BTU MEASUREMENT SYSTEM.

4.7.1 Diagnostic Lights

Energy

Located on the end of main unit opposite the cable connection is a red LED labeled Btu. This LED will flash as energy is transferred.

Liquid Flow

Located on the end of main unit opposite the cable connection is a red LED labeled FLOW. This LED will flash at a rate that is proportional to the liquid flow rate. An unlit LED indicates no flow signal.

4.8 COMMISSIONING

Please read all installation instructions carefully before proceeding. Wiring diagrams are located in the appendix. A worksheet for checking off these steps and recording measured values is located on the following page.

1.	Confirm main unit location and adequate straight pipe run to achieve desired results	Is the main unit located in the correct location as required by the plans? Compare actual straight pipe upstream and downstream of the main unit location to the recommended distances identified in this installation manual. Note: This manual is very conservative and assumes the worst-case pipe obstructions; contact ONICON's technical support department to discuss specifics of your application
In order to proceed with the following steps, the System-30 must be operating and connected to the control system. There must also be flow in pipes. Flow signal readings should be taken while holding the flow rate constant if possible, otherwise, take the various output readings as quickly as possible		
2.	Confirm correct supply voltage	Verify that the correct supply voltage is available at the System-30 signal cable connections. The System-30 BTU MEASUREMENT SYSTEM operates from 24 V AC/DC.
3.	With the HVAC system active, verify that the diagnostic LED's for FLOW and BTU are both flashing.	The LED's are located on the exterior of the main unit on the end opposite from the cables.
The following steps require a multi-meter with the ability to measure DC voltage as well as DC frequency in hertz. Remove the six screws that secure the cover to the main unit and carefully lift the cover off.		
4.	Check temperature readings for T1, T2 and the differential temperature	Set multi-meter for 2 to 4 volt range T2: Measure DC volts between terminals 2(+) and 3(-) T3: Measure DC volts between terminals 2(+) and 3(-) Delta T: Measure DC volts between terminals 2 and 2 The relationship between voltage and temperature is 10 mV/degree F. Multiply the reading in volts by 100 to obtain degrees F. Compare the calculated temperatures to expected values and to the values shown on the network.
5.	Check flow signal	Set multi-meter for DC hertz, voltage range > 15 volts. The test points for flow are located next to the reset button. $\text{GPM} = \frac{\text{Frequency in Hz} \times 60}{\text{Meter Factor in ppg}}$ (refer to calibration tag for meter factor) Compare the calculated flow rate to expected values and to the values shown on the network.
6.	Check Energy Total Output (BTU Output Mode 1 and/or Mode 2)	Set multi-meter for ohms Mode 1: Measure ohms between terminals 3 and 4 Mode 2: Measure ohms between terminals 5 and 6 Confirm that the voltage changes state (low to high or high to low) each time the controls system register records a new energy total.
End of standard commissioning. Please contact ONICON's technical service department at (727)447-6140 with any questions.		

4.8.1 Commissioning Worksheet

Please read all installation instructions carefully prior to proceeding with these steps. Wiring diagrams are located in the appendix. Use the following worksheet for checking off the commissioning steps and recording measured values:

STEP	TEST / MEASUREMENT	S/N:	S/N:	S/N:	S/N:
1.	Meter location				
2.	Supply voltage verified				
3.	Verify diagnostic LED's are flashing				
4.	Note and record temperature readings for T1, T2 & delta T				
5.	Note and record flow rate				
6.	Confirm contact closure output operation for Mode 1 & Mode 2				

TROUBLESHOOTING GUIDE FOR ONICON SYSTEM-30 BTU MEASUREMENT SYSTEMS

NOTE: Also refer to the COMMISSIONING GUIDE located on the preceding pages.

REPORTED PROBLEM:	POSSIBLE SOLUTIONS:
No Flow Signal/ Energy Signal (While hydronic system is active)	<ul style="list-style-type: none"> • Verify 24 VAC / VDC supply voltage to the System-30. • Verify correct wiring to the System-30 (see wiring diagram). • Check turbine for clogging due to debris. • If none of the above, double check hydronic system to ensure that flow is really present in the line. • NOTE: Flow meter function cannot be verified by blowing on the turbine. The sensing system requires a conductive liquid to operate.
Displayed Flow Rate too high or too low	<ul style="list-style-type: none"> • Verify that System-30 isolation valves are fully open and bypass valve is fully closed (if bypass is used). • Check turbine(s) for debris. • Verify supply voltages.
Displayed Temperature too high or too low vs. expected values.	<ul style="list-style-type: none"> • Verify that thermowell is inserted into the flow stream and that the temperature sensor is completely inserted into the thermowells.
Data not available at the control system (Device Offline)	<ul style="list-style-type: none"> • Verify that the MAC address and device instance number are correct and there are no address conflicts. • Verify that the receive LED is flashing on the BACnet board. If the receive LED is not flashing, look for an open connection in the network cable. See Appendix to locate the receive LED. • Verify that the Baud rate selected matches the network Baud rate. (See section 4.5.) • Verify that the polarity of the network connections is correct. • If the meter is at the end-of-line, add a 120 ohm termination resistor across the network terminals. • Press and release switch S-1 to reset the Btu meter.

For technical assistance, contact ONICON Incorporated at (727) 447-6140.

APPENDIX A – DRAWINGS

A-1 TYPICAL SYSTEM INSTALLATION

A-2 / A-3 THERMOWELL INSTALLATION


A-4 WIRING DIAGRAM

A-5 SIGNAL CONNECTION BOARD


A-6 WIRING DIAGRAM FOR DIN CONNECTOR

A-7 BACnet BOARD

SYSTEM-30 BTU MEASUREMENT SYSTEM WITH INTEGRAL
FLOW METER & TEMPERATURE SENSORS

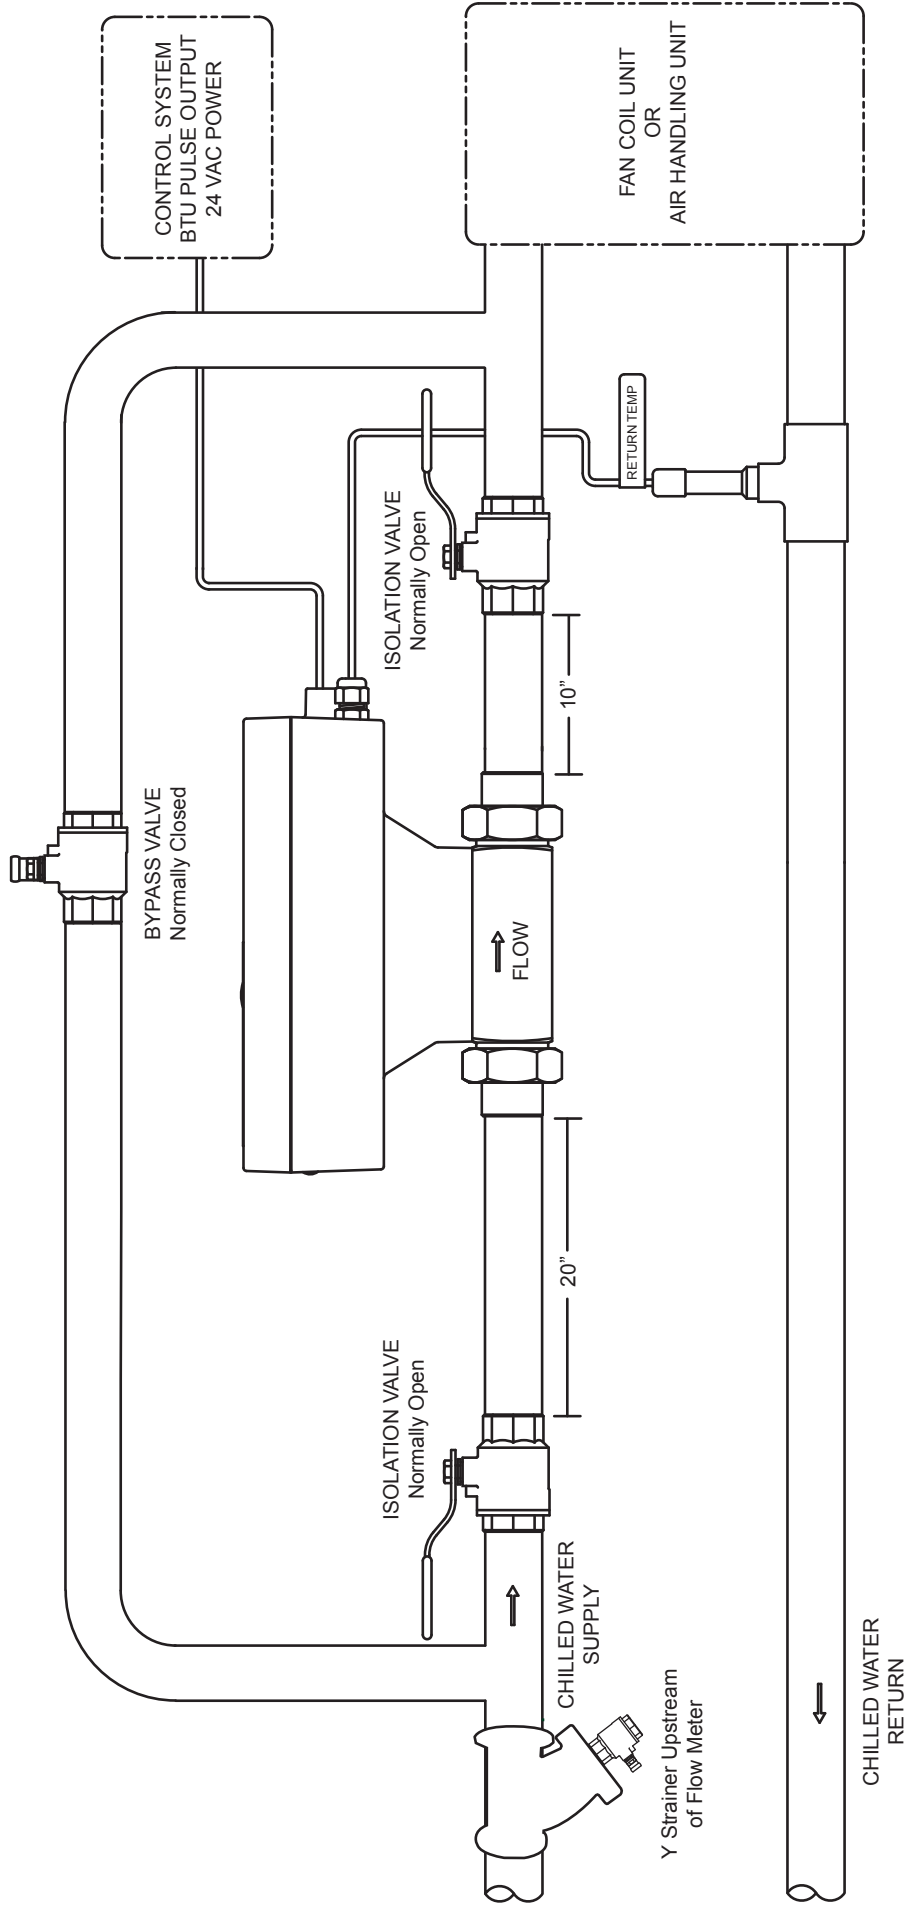



THERMOWELL INSTALLATION IN WELDED PIPE

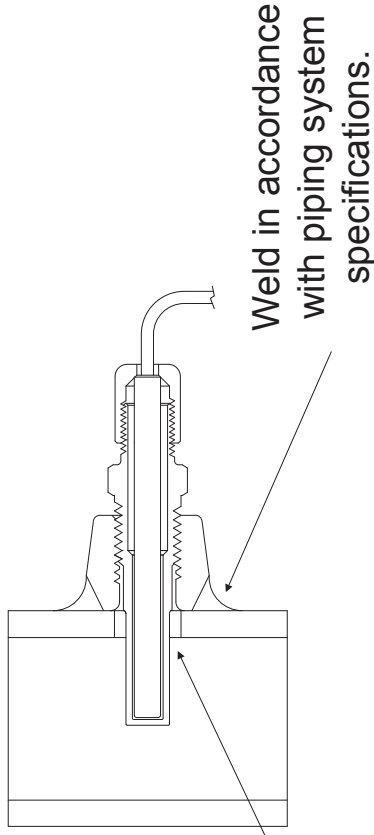

If piping specifications permit, drill 5/8" hole through pipe


DO NOT OVER-TIGHTEN THERMOWELL.
Thermowell has a thin wall for better temperature measurement and can be damaged by over-tightening.

1/4" NPT welded branch outlet

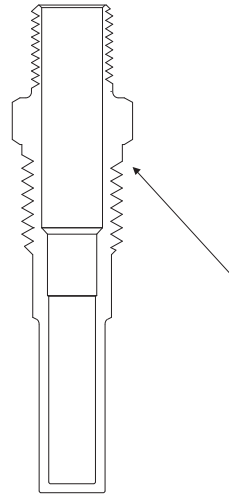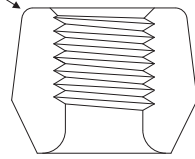

ONICON Thermowell




Apply thin coating of thermally conductive grease before assembling.

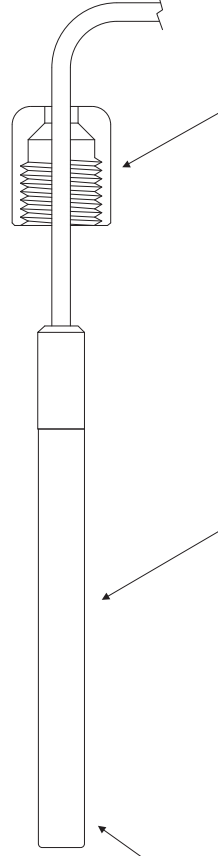

ONICON Temperature Sensor

Retainer Cap

ALTERNATE THERMOWELL INSTALLATION
IN COPPER TEES

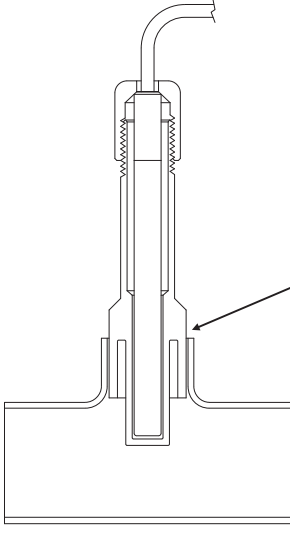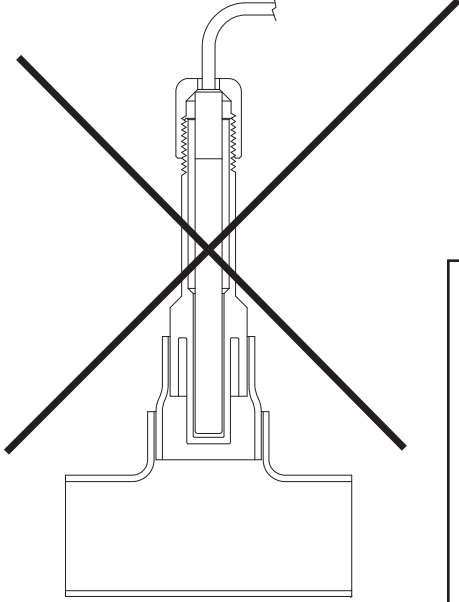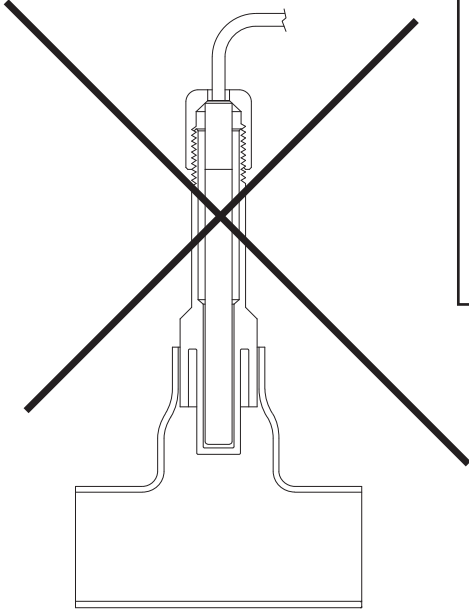


DO NOT INSTALL WITH A BUSHING OR TEE WITH EXTENDED BRANCH OUTLET.
Install thermowell directly into the ONICON furnished tee only or the temperature data will not be correct!

Solder or braze as required by piping

ONICON Temperature Sensor


Retainer Cap

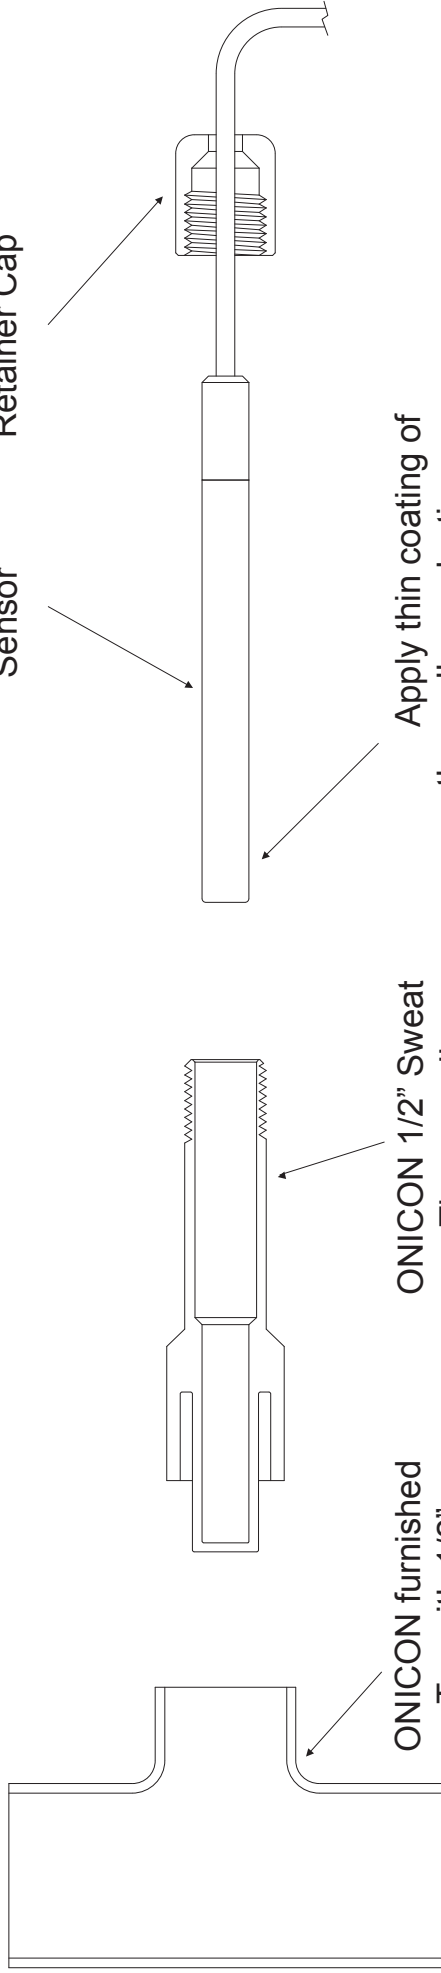


ONICON furnished Tee with 1/2" branch outlet

ONICON 1/2" Sweat Thermowell


Apply thin coating of thermally conductive grease before assembling

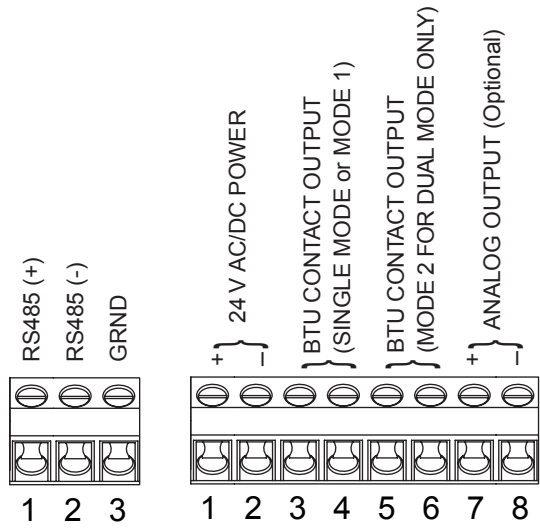

System-30 Signal Connection Board

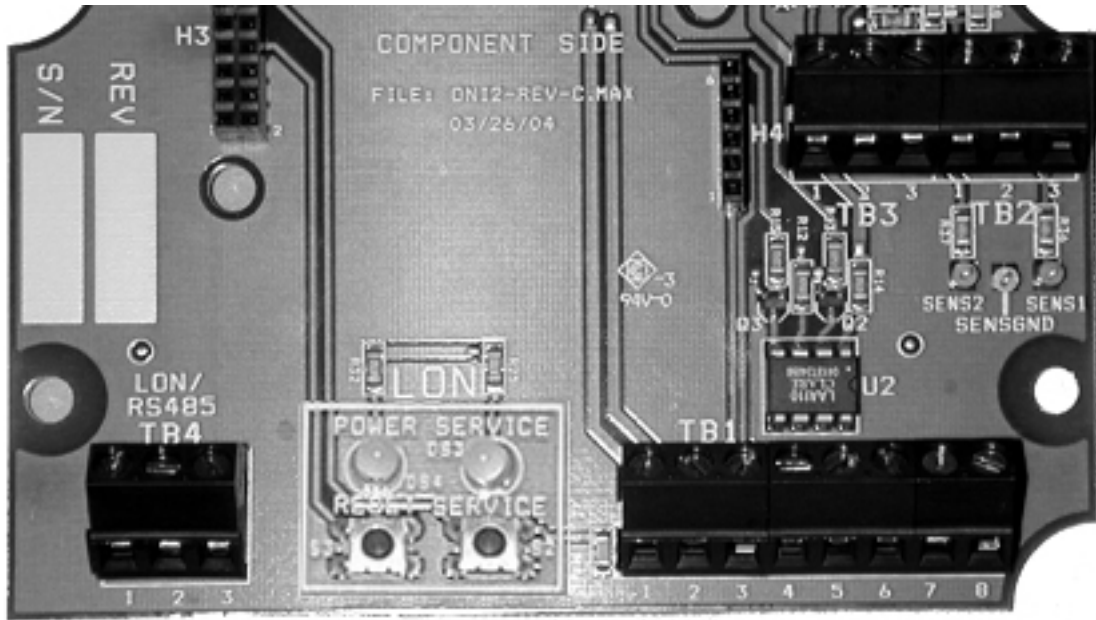

SYSTEM-30 with DIN CONNECTOR WIRING DIAGRAM

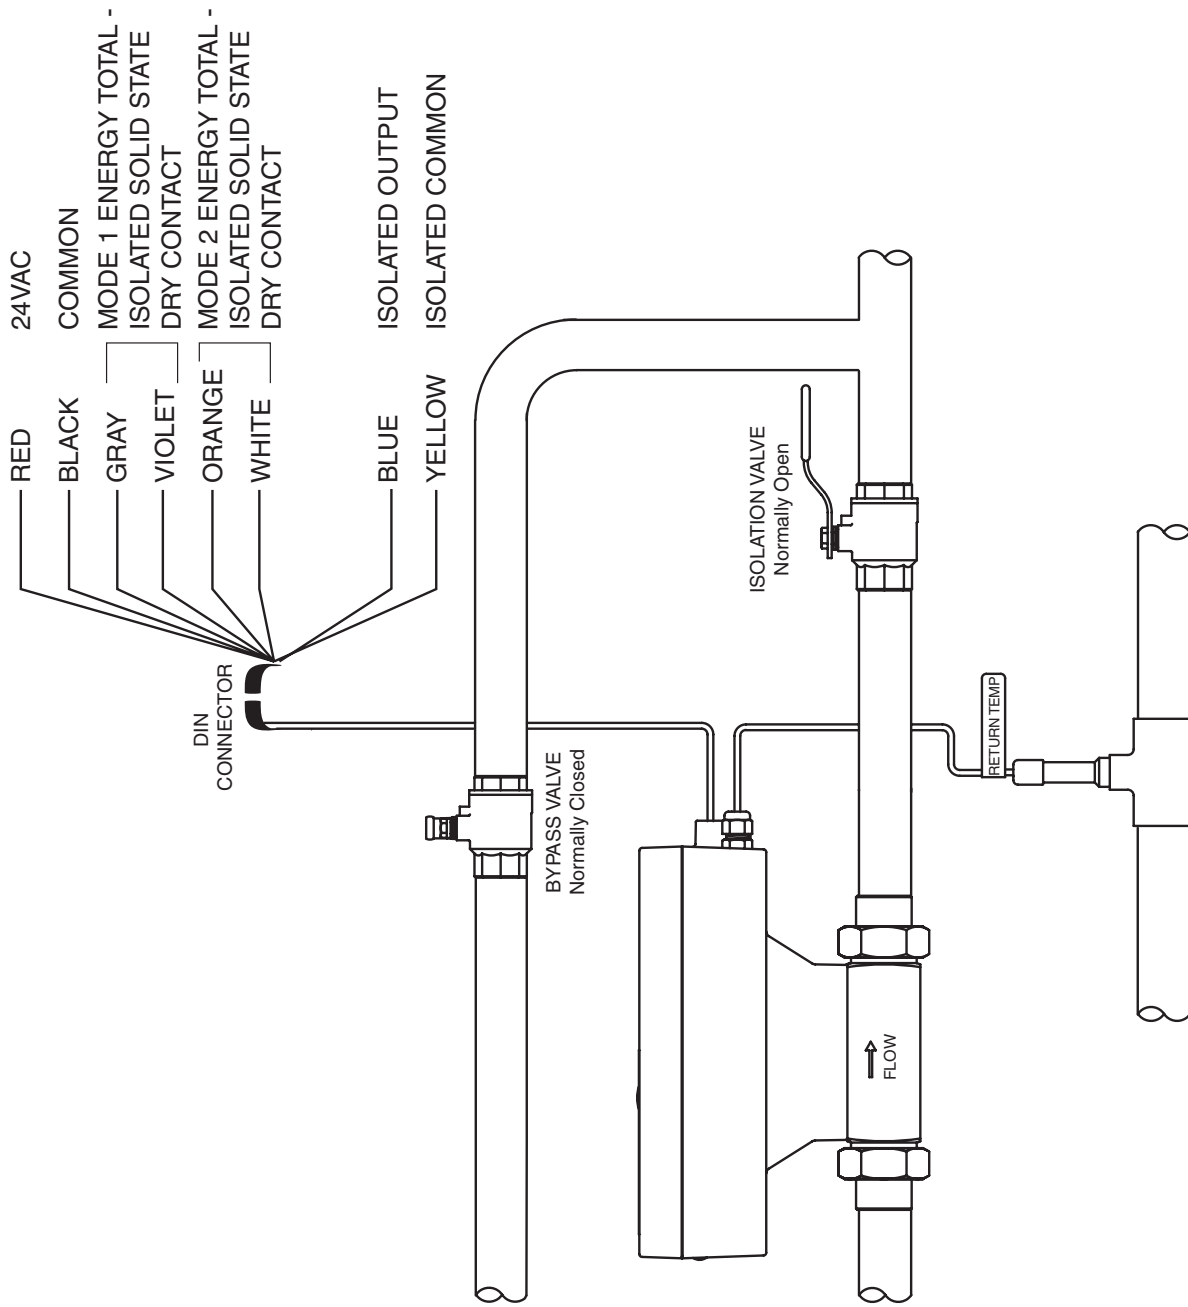

System-30 MS/TP Board

Baud rate
dip switches

MAC address
dip switches

RX LED

TX LED

